

eureka![®]

Invented for the way you clean™

580 Series



OWNER'S GUIDE **Guía del Dueño** **Le Guide du Propriétaire**

Thank you for purchasing your new Eureka Vacuum!
¡Gracias por la compra de su nueva aspiradora Eureka!
Merci d'avoir acheté votre nouvel aspirateur Eureka!

**Before Returning, Call
Eureka Customer Service**

Antes de enviar de regreso, llame al Servicio al Cliente de Eureka
Avant de le retourner, appelez le service à la clientèle Eureka

HELPLINE LÍNEA DE AYUDA LIGNE D'AIDE

1-800-282-2886



8 a.m. to 7:30 p.m. (CST), Monday - Friday
10 a.m. to 6:30 p.m. (CST), Saturday - Sunday

8 a.m. a 7:30 p.m. (CST), de Lunes a Viernes
10 a.m. a 6:30 p.m. (CST), Sábado y Domingo

8 h à 19 h 30 (CST), lundi au vendredi
10 h à 18 h 30 (CST), samedi et dimanche

2-in-1 Rechargeable Vacuum Cleaner
Household Type

2-en-1 Aspiradora recargable
para el hogar

Aspirateur rechargeable 2-en-1
Type résidentiel

www.eureka.com

Where to Find Important Vacuum Information

Keep this information

Write the model, type and serial number here:

Date of purchase (keep your receipt) _____

Model number and type _____

Serial number _____

Find these numbers on a label on the lower back side of the vacuum cleaner. Refer to these numbers when ordering parts and accessories or if service is needed.



Before You Start Your Vacuum Cleaner

Read these instructions for assembly and use. This Owner's Guide provides important instructions to prolong the life of your Eureka Vacuum cleaner.

Inspection

Carefully unpack and inspect your new Eureka vacuum cleaner for shipping damage. Each unit is tested and thoroughly inspected before shipping. For instructions regarding any shipping damage, call Eureka Customer Service **HELPLINE 1-800-282-2886** immediately.

Table of Contents

Important Safeguards	1
What's in the Carton	2
Easy Assembly	2
How to Charge Battery	2
How to Identify Parts of Vacuum Cleaner	3
How to Use for Floors	3
How to Use Hand-Held Vacuum	3
Maintenance Schedule	4
Problem Solving	5
Battery Disposal	5
Discarding the Vacuum	5
How to Clean Brush Roll	6
Eureka Limited Warranty Information	6
Spanish Owner's Guide	7-13
French Owner's Guide	14-20
Order Forms and Parts List	21-22

 Follow caution information wherever you see this symbol.

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic precautions should always be followed, including the following:
READ ALL INSTRUCTIONS BEFORE USING THIS VACUUM CLEANER

WARNING

Risk of injury to persons. Always turn off the handheld vacuum before connecting it to the upright vacuum.




To reduce the risk of fire, electric shock, or injury:

- Do not use outdoors or on wet surfaces.
- Do not operate the vacuum cleaner or charger that has been damaged in any way. If vacuum cleaner is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- To avoid excessive heat and damage to the unit or batteries, do not operate the vacuum cleaner while charging.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual.
- Use only the charger provided to recharge: Model CSD 1300150U-31 for 120 volts.
- Do not pull or carry the charger by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Keep cord away from heated surfaces.
- Do not use extension cords or outlets with inadequate current-carrying capacity for the charger.
- Do not unplug by pulling on cord. To unplug, grasp the charger, not the cord.
- Do not handle charger or vacuum cleaner with wet hands.
- **DO NOT MUTILATE OR INCINERATE BATTERIES AS THEY WILL EXPLODE AT HIGH TEMPERATURES.**
- Leaks from battery cells can occur under extreme usage or temperature conditions. If the liquid gets on the skin (1) wash quickly with soap and water or (2) neutralize with a mild acid such as lemon juice or vinegar. If the liquid gets into the eyes, flush them immediately with clean water for a minimum of 10 minutes. Seek medical attention.
- The terminal on the vacuum cleaner should be kept free and clean of objects. While there is no shock hazard from the terminal, a burn could occur if metal objects are inserted into the terminal area.
- This vacuum cleaner creates suction. Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without a filter in place. When servicing the unit, never put fingers or other objects into the fan chamber in case the unit would accidentally be turned on.
- Use extra care when cleaning stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Use the charger indoors in a cool, dry area not exposed to the weather to avoid electrical shock and/or cleaner damage.
- Keep your work area well lighted.
- Unplug electrical appliances before vacuuming them.
- Overcharging, short circuiting, reverse charging, mutilation or incineration of the cells and the batteries must be avoided to prevent one or more of the following occurrences: release of toxic materials, release of hydrogen and/or oxygen gas, rise in surface temperature.
- If a cell or a battery has leaked or vented, it should be replaced immediately using protective gloves.
- If and when necessary, these cells or batteries must be replaced with identical new ones from the same manufacturer. If a cell or a battery to be replaced is connected with other cells or batteries in series, it is recommended that the other cells or batteries be replaced with new ones at the same time.
- Reverse polarity installation of the cell or the battery in the end product must be avoided.
- Do not incinerate this appliance even if it is severely damaged. The batteries can explode in a fire.

ENGLISH

SAVE THESE INSTRUCTIONS

What's in the Carton

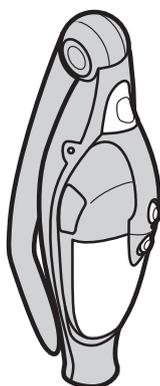


Vacuum body and
detachable hand-held vacuum



Floor nozzle



Important safeguards

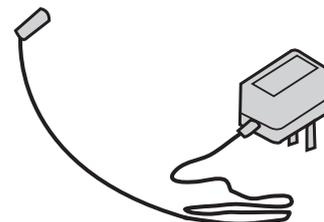

Charger

Easy Assembly

- 1) Push vacuum body firmly onto floor nozzle (Fig. 1).
- 2) Press handle release button to raise handle (Fig. 2).

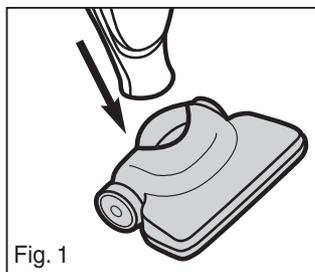


Fig. 1

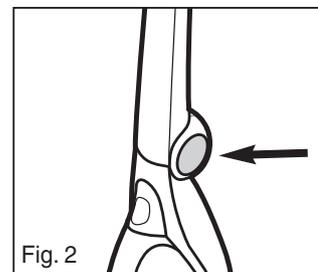


Fig. 2

How to Charge Battery

NOTE: Charge battery 16 hours before initial use.

- 1) Slide both power switches to 'OFF' position (Fig. 3).
- 2) Insert round connector into charging socket (Fig. 4).
- 3) Plug charger into electrical outlet (Fig. 5).
- 4) Red light indicates the battery is charging (Fig. 6).

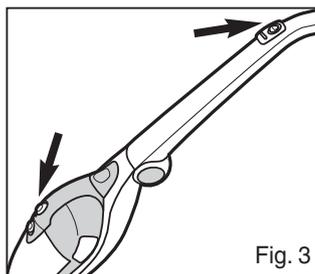


Fig. 3

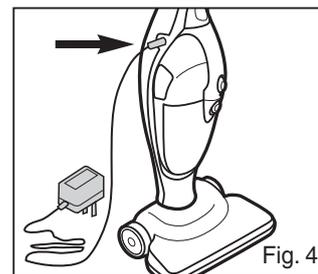


Fig. 4

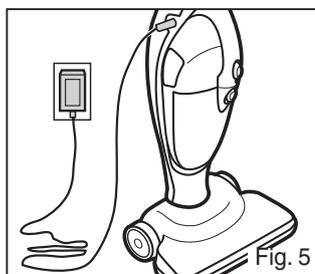


Fig. 5


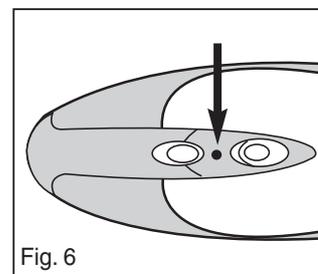


Fig. 6



Always recharge the battery before it runs down completely. Running down battery will severely shorten battery life.

How to Identify Parts of Vacuum Cleaner

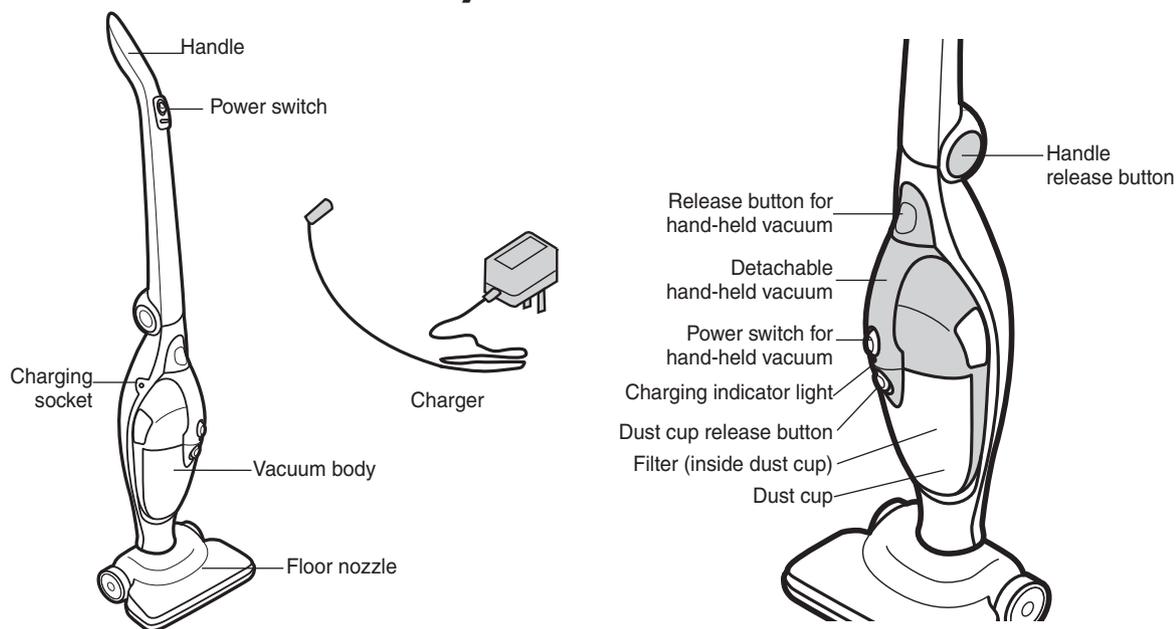





ENGLISH

How to Use for Floors

- 1) Slide power switch to 'FLOOR' or 'CARPET' (Fig. 1).

How to Use Hand-Held Vacuum

- 1) Press release button and pull out hand-held vacuum (Fig. 2).
- 2) Slide power switch to turn on.
- 3) Use for stairs, upholstery and small jobs (Fig. 3).
- 4) To replace, insert narrow end of hand-held unit into vacuum body. Push unit back until it clicks into place (Fig. 4).

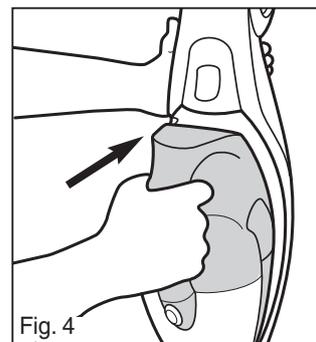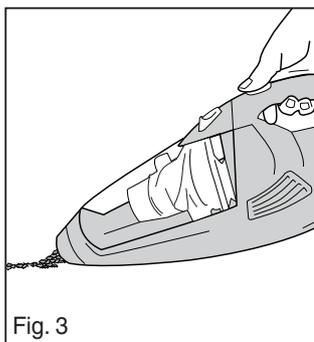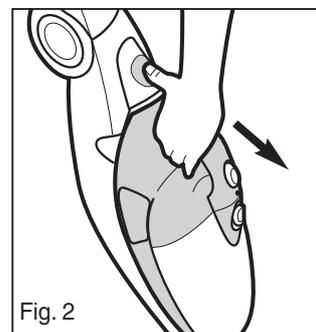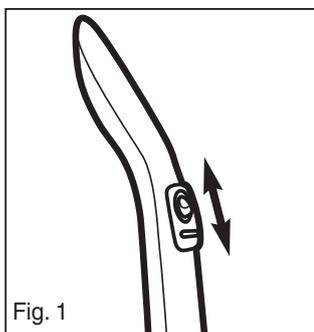

Maintenance Schedule

Maintenance Schedule is also located on vacuum body, under hand-held vacuum.



READ ALL INSTRUCTIONS BEFORE USING THIS VACUUM CLEANER.
Moving parts! Make sure power switch is in 'OFF' position before recharging battery.



Filter assembly
81369-1

DUST CUP – Empty after each use



Press button and remove dust cup.



Remove filter assembly.




Empty dust cup.

FILTER 81369-1 – Check regularly, clean as needed



Remove filter assembly and empty debris.

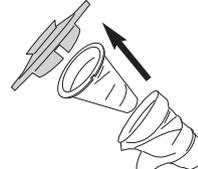


Twist and lift off lid; separate 2 filters.




Rinse filters and lid; dry thoroughly.




Replace inner filter into filter cover.

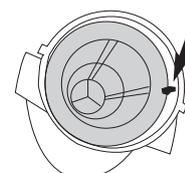


Align notch to rib and push inner filter down.

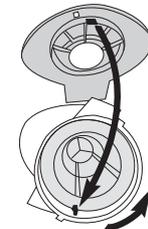

Align lid notch to filter rib and twist to lock.

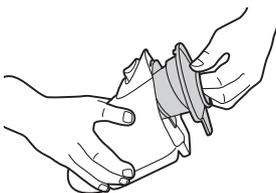

Reposition filter assembly inside dust cup.

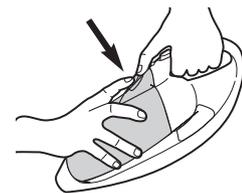

Replace dust cup into hand-held vacuum.

IMPORTANT – Recharge vacuum after each use

Problem Solving

Problem	Solution
Charging indicator light is not lit while charging.	<ul style="list-style-type: none"> • Make sure round connector is pushed into charging socket and charger is plugged into electrical outlet. • Check power switches on handle and on hand-held vacuum. Make sure both switches are in 'OFF' position. • Remove hand vacuum from base and look for blockage in the air path from the floor nozzle to the hand vacuum. Lay the stick vacuum flat and use a screwdriver to pull the blockage up and out of the air path. Reattach the hand vacuum; turn the unit on to clear any remaining debris. Remove hand vacuum and recheck for additional clogs. Repeat above steps if needed.
Not enough suction power.	<ul style="list-style-type: none"> • Empty dust cup and clean filter. Page 4. • Charge battery.
Not enough running time.	<ul style="list-style-type: none"> • Charge battery 16 hours.
Brush roll does not turn	<ul style="list-style-type: none"> • Check brush roll for debris. Page 6. • Make sure power switch on handle is set on 'CARPET.'

ENGLISH

Discarding the Vacuum



Before you discard this vacuum, dispose of batteries in an environmentally safe manner. Do not discard batteries with your regular household trash.

Important Battery Disposal Information – Call 1-800-822-8837



To preserve natural resources, please recycle or dispose of expired battery pack properly.



This product contains a nickel-metal hydride battery. It must be disposed of properly. Local laws may prohibit disposal of nickel-metal hydride batteries in ordinary trash. Consult your local waste authority for information regarding available recycling and/or disposal options.

How to Clean Brush Roll

Clean Brush Roll Monthly

- 1) Slide power switch to 'FLOOR' or 'CARPET' (Fig. 1).
- 2) Turn vacuum face down on floor. Use scissors to remove hair and threads from brush roll (Fig. 2).

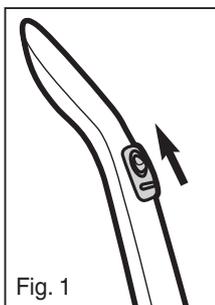


Fig. 1

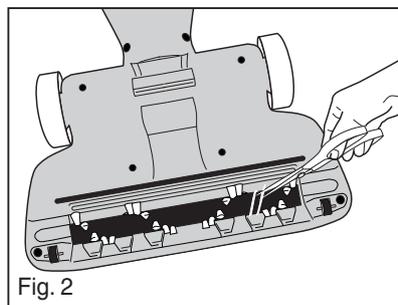


Fig. 2

The Eureka Limited Warranty

Eureka warrants this vacuum cleaner to be free from defects in material and workmanship for a term of one year for normal household use. Warranty is granted only to the original purchaser and members of immediate household.

This warranty is good for one year from the date of purchase only when the vacuum cleaner is used in the accordance with Eureka operating instructions.

This Warranty Does Not Cover

- Parts of the vacuum that require replacement under normal use such as disposable dust bags, filters, drive belts, light bulbs, brush roll, bristles, impellers and cleaning.
- Damages or malfunctions caused by negligence, abuse, and use not in accordance with the Owner's Guide.
- Defects or damages caused by unauthorized service or the use of other than Genuine Eureka, ARM & HAMMER™ and Filtrete™ by 3M parts.

What Eureka Will Do

Eureka will, at its option, repair or replace a defective vacuum or vacuum part that is covered by this warranty. As a matter of warranty policy, **Eureka will not refund the consumer's purchase price.**

Warranty Registration

Please fill out and return the warranty registration card accompanying your vacuum.

Obtaining Warranty Service

To obtain warranty service you must return the vacuum or vacuum part along with "proof of purchase" to any Eureka Authorized Warranty Station. For Eureka

Authorized Warranty Station or Service Information, visit **www.eureka.com**, write or telephone toll free:

USA: 1-800-282-2886	Mexico: (55) 5343-384	Canada: 1-800-282-2886
Electrolux Home Care	Electrolux Home Care	Electrolux Home Care
North America Service Division	North America Service Division	North America Service Division
P.O. Box 3900	5855 Terry Fox Way	5855 Terry Fox Way
Peoria, IL 61612	Mississauga, Ontario L5V 3E4	

Obtaining Warranty Service Outside Your Community

You must pay the shipping charges to the Eureka Authorized Warranty Station.

Return Shipping Charges will be paid by the Warranty Station. When returning parts for repair, please include the model, type and serial number located on the rating plate on the lower backside of the vacuum.

Further Limitations and Exclusions

Any warranty that may be implied in connection with your purchase or use of the vacuum, including any warranty of Merchantability or any warranty for Fitness For A Particular Purpose is limited to the duration of this warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

Your relief for the breach of this warranty is limited to the relief expressly provided above. In no event shall the manufacturer be liable for any consequential or incidental damages you may incur in connection with your purchase or use of the vacuum.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights. You may also have other rights, which may vary by state.

The ARM & HAMMER name is a trademark of Church and Dwight Co., Inc. 3M and Filtrete are trademarks of 3M Company, used by Electrolux Home Care Products, Inc. under license.