



Operation Manual

Fieldbus system
PROFIBUS DP compatible SI unit

PRODUCT NAME

EX600-SPR#A

EX600-ED#

MODEL/ Series

SMC Corporation

Table of Contents

| | |
|-----------------------------------|----|
| Safety Instructions | 3 |
| System Outline | 9 |
| Definition and terminology | 10 |
| Assembly | 12 |
| Mounting and Installation | 15 |
| Installation | 15 |
| Wiring | 17 |
| SI Unit | |
| Model Indication and How to Order | 18 |
| Names and Functions of Product | 18 |
| Mounting and Installation | 19 |
| Wiring | 19 |
| Setting and Adjustment | 20 |
| LED Display | 24 |
| Specification | 26 |
| Specifications | 26 |
| Dimensions | 27 |
| Endplate | |
| Model Indication and How to Order | 28 |
| Names and Functions of Product | 28 |
| Mounting and Installation | 29 |
| Wiring | 29 |
| Specification | 30 |
| Specifications | 30 |
| Dimensions | 30 |

| | |
|-----------------------------------|----|
| Maintenance | 32 |
| Troubleshooting | 33 |
| Parameter Setting | 42 |
| Parameter definition and setting | 42 |
| Hardware Configuration | 55 |
| GSD file and icon | 55 |
| Configuration layout | 55 |
| SIEMENS PLC S7™ connection method | 56 |
| Parameter setting at PLC | 59 |
| I/O Map | 61 |
| Diagnostic | 62 |
| Accessories | 70 |

Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of "Caution", "Warning" or "Danger". They are all important notes for safety and must be followed in addition to International standards (ISO/IEC), Japan Industrial Standards (JIS) *¹ and other safety regulations*².

*1 ISO 4414: Pneumatic fluid power - - General rules relating to systems.
ISO 4413: Hydraulic fluid power - - General rules relating to systems.
IEC 60204-1: Safety of machinery - -Electrical equipment of machines. (Part 1: General requirements)
ISO 10218-1992: Manipulating industrial robots -Safety.
JIS B 8370: General rules for pneumatic equipment.
JIS B 8361: General rules for hydraulic equipment.
JIS B 9960-1: Safety of machinery - Electrical equipment of machines. (Part 1: General requirements)
JIS B 8433-1993: Manipulating industrial robots - Safety.
etc.

*2 Labor Safety and Sanitation Law, etc.

-  **Caution** : CAUTION indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.
-  **Warning** : WARNING indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.
-  **Danger** : DANGER indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.

Warning

1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.

Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalog information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

2. Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

3. Do not service or attempt to remove product and machinery/equipment until safety is confirmed.

1. The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.

4. Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following conditions.

1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
2. Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalog.
3. An application which could have negative effects on people, property, or animals requiring special safety analysis.
4. Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation.

Caution

1. The product is provided for use in manufacturing industries.

The product herein described is basically provided for peaceful use in manufacturing industries. If considering using the product in other industries, consult SMC beforehand and exchange specifications or a contract if necessary.
If anything is unclear, contact your nearest sales branch.

Limited warranty and Disclaimer/Compliance Requirements

The product used is subject to the following "Limited warranty and Disclaimer" and "Compliance Requirements".

Read and accept them before using the product.

Limited warranty and Disclaimer

1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered ^{*3}. Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.
2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided.
This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalog for the particular products.

*3 Vacuum pads are excluded from this 1 year warranty.

A vacuum pad is a consumable part, so it is warranted for a year after it is delivered.

Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

Compliance Requirements

When the product is exported, strictly follow the laws required by the Ministry of Economy, Trade and Industry (Foreign Exchange and Foreign Trade Control Law).

Operator

- ◆ This operation manual has been written for those who have knowledge of machinery and apparatus that use pneumatic equipment and have full knowledge of assembly, operation and maintenance of such equipment.
- ◆ Please read this operation manual carefully and understand it before assembling, operating or providing maintenance to the product.

■ Precautions

Warning


- Do not disassemble, modify (including changing the printed circuit board) or repair.
An injury or failure can result.
- Do not operate or set with wet hands.
This may lead to an electric shock.
- Do not operate the product outside of the specifications.
Do not use for flammable or harmful fluids.
Fire, malfunction, or damage to the product can result.
Verify the specifications before use.
- Do not operate in an atmosphere containing flammable or explosive gases.
Fire or an explosion can result.
This product is not designed to be explosion proof.
- If using the product in an interlocking circuit:
 - Provide a double interlocking system, for example a mechanical system.
 - Check the product regularly for proper operation.Otherwise malfunction can result, causing an accident.
- The following instructions must be followed during maintenance:
 - Turn off the power supply.
 - Stop the air supply, exhaust the residual pressure and verify that the air is released before performing maintenance.Otherwise an injury can result.

Caution

- When handling the unit or assembling/replacing units:
 - Do not touch the sharp metal parts of the connector or plug for connecting units.
 - Take care not to hit your hand when disassembling the unit.
The connecting portions of the unit are firmly joined with seals.
 - When joining units, take care not to get fingers caught between units.
An injury can result.
- After maintenance is complete, perform appropriate functional inspections.
Stop operation if the equipment does not function properly.
Safety cannot be assured in the case of unexpected malfunction.
- Provide grounding to assure the safety and noise resistance of the Fieldbus system.
Individual grounding should be provided close to the product with a short cable.

■ NOTE

- Follow the instructions given below when designing, selecting and handling the product.
- The instructions on design and selection (installation, wiring, environment, adjustment, operation, maintenance, etc.) described below must also be followed.
 - * Product specifications
 - The direct current power supply to combine should be UL 1310 Class2 power supply when conformity to UL is necessary.
 - Use the specified voltage.
Otherwise failure or malfunction can result.
 - The power supply for the unit should be 0V as the standard for both the power supply for outputs and the power supply for inputs and control.

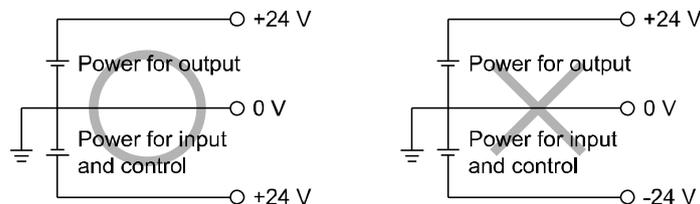

- Reserve a space for maintenance.
Allow sufficient space for maintenance when designing the system.
- Do not remove any nameplates or labels.
This can lead to incorrect maintenance, or misreading of the operation manual, which could cause damage or malfunction to the product.
It may also result in non-conformity to safety standards.
- Beware of inrush current when the power supply is turned on.
Some connected loads can apply an initial charge current which will activate the over current protection function, causing the unit to malfunction.

● Product handling

*Installation

- Do not drop, hit or apply excessive shock to the SI unit.
Otherwise damage to the product can result, causing malfunction.
- Tighten to the specified tightening torque.
If the tightening torque is exceeded the mounting screws may be broken.
IP67 protection cannot be guaranteed if the screws are not tightened to the specified torque.
- If a large manifold valve is mounted, lift the unit so that stress is not applied to the connecting part while transporting.
The stress may cause breakage of the connecting part. The unit may become very heavy depending on the combination. Transportation/installation shall be performed by multiple operators.
- Never mount a product in a location that will be used as a foothold.
The product may be damaged if excessive force is applied by stepping or climbing onto it.

*Wiring

- Avoid repeatedly bending or stretching the cables, or placing heavy load on them.
Repetitive bending stress or tensile stress can cause breakage of the cable.
- Wire correctly.
Incorrect wiring can break the product.
- Do not perform wiring while the power is on.
Otherwise damage to the SI unit and/or input or output device can result, causing malfunction.
- Do not route wires and cables together with power or high voltage cables.
Otherwise the SI unit and/or input or output device can malfunction due to interference of noise and surge voltage from power and high voltage cables to the signal line.
Route the wires (piping) of the SI unit and/or input or output device separately from power or high voltage cables.
- Confirm proper insulation of wiring.
Poor insulation (interference from another circuit, poor insulation between terminals, etc.) can lead to excess voltage or current being applied to the product, causing damage.
- Take appropriate measures against noise, such as using a noise filter, when the Fieldbus system is incorporated into equipment.
Otherwise noise can cause malfunction.

*Environment

- Select the proper type of protection according to the environment of operation.
IP67 protection is achieved when the following conditions are met.
 - (1) The units are connected properly with fieldbus cable with M12 connector and power cable with M12 (M8) connector.
 - (2) Suitable mounting of each unit and manifold valve.
 - (3) Be sure to fit a waterproof cap on any unused connectors.
If using in an environment that is exposed to water splashes, please take measures such as using a cover.
Do not use in an environment where moisture or water vapor are present. Otherwise failure and malfunction can result.
- Do not use in a place where the product could be splashed by oil or chemicals.
If the product is to be used in an environment containing oils or chemicals such as coolant or cleaning solvent, even for a short time, it may be adversely affected (damage, malfunction etc.).
- Do not use the product in an environment where corrosive gases or fluids could be splashed.
Otherwise damage to the product and malfunction can result.
- Do not use in an area where surges are generated.
If there is equipment generating large surge near the unit (magnetic type lifter, high frequency inductive furnace, welding machine, motor, etc.), this can cause deterioration of the internal circuitry element of the unit or result in damage. Take measures against the surge sources, and prevent the lines from coming into close contact.

- When a surge-generating load such as a relay, valve or lamp is driven directly, use a product with a built-in surge absorbing element.
Direct drive of a load generating surge voltage can damage the unit.
- The product is CE marked, but not immune to lightning strikes. Take measures against lightning strikes in the system.
- Prevent foreign matter such as dust or wire debris from getting inside the product.
- Mount the product in a place that is not exposed to vibration or impact.
Otherwise failure or malfunction can result.
- Do not use the product in an environment that is exposed to temperature cycle.
Heat cycles other than ordinary changes in temperature can adversely affect the inside of the product.
- Do not expose the product to direct sunlight.
If using in a location directly exposed to sunlight, shade the product from the sunlight.
Otherwise failure or malfunction can result.
- Keep within the specified ambient temperature range.
Otherwise malfunction can result.
- Do not operate close to a heat source, or in a location exposed to radiant heat.
Otherwise malfunction can result.

***Adjustment and Operation**

- Set the switches by using a sharp-pointed screwdriver etc. When setting the switch, do not touch other unrelated parts.
This can cause parts damage or malfunction due to a short circuit.
- Perform settings suitable for the operating conditions.
Incorrect setting can cause operation failure.
For details of each setting, refer to page 20 to 23 of this manual.
- Please refer to the PLC manufacturer's manual etc. for details of programming and addresses.
For the PLC protocol and programming refer to the relevant manufacturer's documentation.


***Maintenance**

- Turn off the power supply, stop the supplied air, exhaust the residual pressure and verify the release of air before performing maintenance.
There is a risk of unexpected malfunction.
- Perform regular maintenance and inspections.
There is a risk of unexpected malfunction.
- After maintenance is complete, perform appropriate functional inspections.
Stop operation if the equipment does not function properly.
Otherwise safety is not assured due to an unexpected malfunction or incorrect operation.
- Do not use solvents such as benzene, thinner etc. to clean each unit.
They could damage the surface of the body and erase the markings on the body.
Use a soft cloth to remove stains.
For heavy stains, use a cloth soaked with diluted neutral detergent and fully squeezed, then wipe up the stains again with a dry cloth.

System Outline

•System configuration

The EX600 range of units can be connected to various types of Fieldbus to realize the reduction of input or output device wiring and the distributed control system. The unit communicates with the Fieldbus through the SI unit. One SI unit can be connected with manifold valves with up to 32 points and the input • output • I/O units with maximum 10 points.

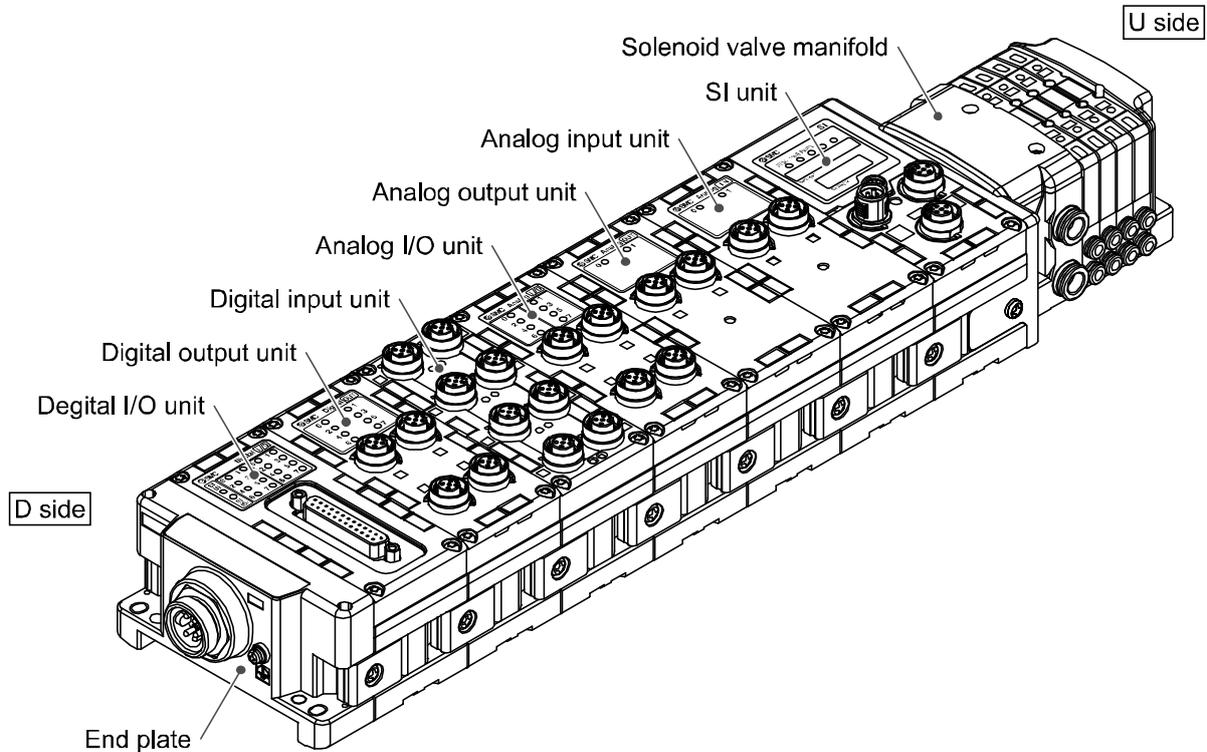

SI unit: Performs Fieldbus communication and solenoid valve manifold ON/OFF output.

Digital input unit: For connecting sensors with switch output capability. PNP and NPN types are available.

Digital output unit: For connecting output device such as solenoid valves, lamps, buzzers, etc. PNP and NPN types are available.

Digital I/O unit: This unit has both digital input and output functions. PNP and NPN types are available.

Analog input unit: For connecting sensors with analog output capability.

Analog output unit: This can be connected to the equipment which can read analog input.

Analog I/O unit: This unit has both analog input and output functions.

End plate: Connected at EX600 Manifold's D side, incorporating the power supply connection.

Solenoid valve manifold: An assembly of solenoid valves. One connector is used as the electric connection to all connected valves.

■ Definition and terminology

| | Terminology | Definition |
|---|---------------------------|---|
| A | Address (Station Address) | A number assigned to identify the unit connected onto the PROFIBUS DP network. It must not be duplicated. |
| | AD value | The signal from the analog input device is converted to digital, and displayed in decimal and hexadecimal. These hexadecimal and decimal values are also outputted to the analog output device. |
| C | Communication speed | The speed at which the fieldbus sends and receives data. It depends on higher-level equipment (PLC, etc.) and is measured in bps (bits per second). |
| | Current consumption | The current necessary to operate each unit. |
| D | Diagnosis Information | Consists of the standard diagnosis information defined by PROFIBUS DP and the diagnosis information unique to the product. |
| | DIN rail | A metal rail conforming with DIN (German) standard. |
| | D Side | The side connected to the end plate when the product is connected to a manifold. |
| E | Enclosure (IP□□) | Abbreviation of international (ingress) protection. A standard related to the protection from external objects (hands, steel ball, steel wire, dust, water, etc.) applied to the product. |
| F | FAIL SAFE Function | Sends the communication frame including the output data with a 0 data length when the PLC (master) has come to clear mode. This sets the product to a defined status (HOLD/CLEAR/Forced on). |
| | FE | Abbreviation of functional earth. |
| | Fieldbus | The protocol that uses digital communication to exchange signals between field equipment (instruments and actuators) running on site and a PLC. |
| | FREEZE Function | A function to synchronize the input data of the SI unit with the FREEZE command from the PLC (master). |
| G | GSD file | The file to which the master data of the product is written. |
| H | Handheld Terminal (H.T.) | Connected to the dedicated connector of the SI unit to adjust the internal parameters, monitor the status of all input and output signals, and turn on input and output forcedly. |
| I | Idling | A status in which the SI unit has received the FAIL SAFE command. The output can be cleared, held or forcedly switched on by setting parameters. |
| | ID No. | A 16 bit number assigned by the PNO to identify the product. |
| M | Manifold | A form consisting of multiple components. A form made by combining multiple components |
| N | NPN input | Takes the sensor output that uses the NPN transistor to the signal output line. |
| | NPN output | The output type that uses an NPN transistor to operate output device. It is also known as a positive common type since a positive potential is applied to the power supply line. |
| | Number of inputs | The number of points that can receive information from input device (sensor, switch, etc.). |
| | Number of outputs | The number of points that can operate output device (solenoid valve, light, motor, etc.). |
| O | Open circuit detection | A diagnosis function to detect if the input or output device wiring is disconnected. |

| | Terminology | Definition |
|---|--------------------------|--|
| P | PLC | Abbreviation of programmable logic controller. A digital computer used for automation of electromechanical processes. |
| | PNP input | Takes the sensor output that uses the PNP transistor to the signal output part. |
| | PNP output | The output type that uses a PNP transistor to operate output device. It is also known as a negative common type since a negative potential is applied to the power supply line. |
| S | Short circuit detection | A diagnosis function to detect an over current due to the short circuit of the output and/or power supply positive line with respect to the GND line. |
| | Short circuit protection | A function to protect the internal circuit from being broken by an over current due to the short circuit of the output and/or power supply positive line with respect to the GND line. |
| | SI unit | Abbreviation of serial interface unit. A unit connected to a the PLC to communicate input and output data. |
| | SYNC Function | A function to synchronize the output data of the SI unit with the SYNC command from the master. |
| T | Terminal resistor | A resistor mounted at either end of the fieldbus network. |
| U | U Side | The side connected to the solenoid valve when the product is connected to a manifold. |

Assembly


•Precautions before mounting

The units that can be connected vary depending on the SI unit product number.
Check the applicable unit type before mounting the unit.

| Units that can be assembled | | | Product number of the SI unit | |
|-----------------------------|---------------------|-------------|-------------------------------|-------------|
| | | | EX600-SPR□ | EX600-SPR□A |
| Product number | Digital input unit | EX600-DX□B | ○ | ○ |
| | | EX600-DX□C□ | ○ | ○ |
| | | EX600-DX□D | ○ | ○ |
| | | EX600-DX□E | × | ○ |
| | | EX600-DX□F | × | ○ |
| | Disital output unit | EX600-DY□B | ○ | ○ |
| | | EX600-DY□E | × | ○ |
| | | EX600-DY□F | × | ○ |
| | Digital I/O unit | EX600-DM□E | × | ○ |
| | | EX600-DM□F | × | ○ |
| | Analog input unit | EX600-AXA | ○ | ○ |
| | Analog output unit | EX600-AYA | × | ○ |
| | Analog I/O unit | EX600-AMB | × | ○ |
| | Handheld terminal | EX600-HT1 | ○ | ○ *1 |
| EX600-HT1A | | ○ | ○ | |

*1: EX600-HT1 cannot recognize EX600-D□□E, EX600-D□□F, Ex600-AYA and EX600-AMB.

Find the product number of the SI unit referring to the label shown in the figure below.

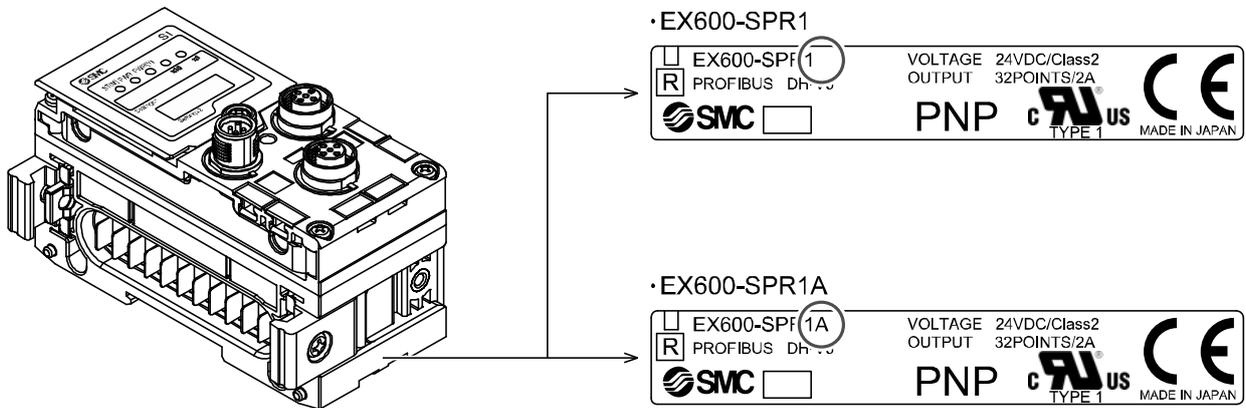


•Composing the unit as a manifold

*: If the unit was purchased as a manifold, the work described in this section is not necessary.

(1)Connect the unit to the end plate.


The Digital unit, Analog unit can be connected in any order.

Tighten the bracket of the joint using tightening torque 1.5 to 1.6 Nm.

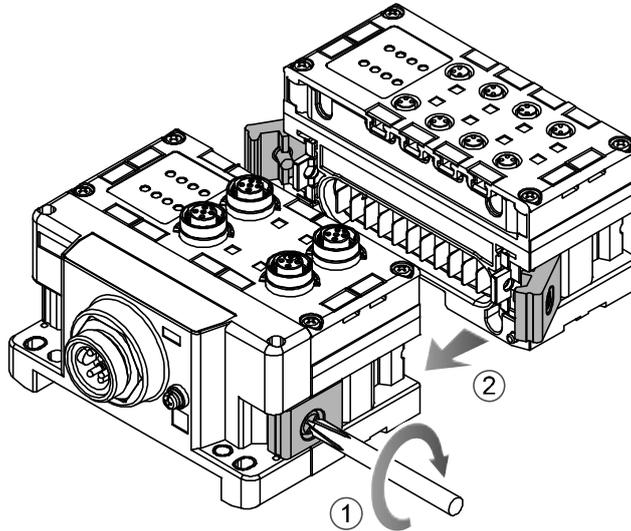

(2)Add more units.

Up to 10 units (including the SI unit) can be connected to one manifold.

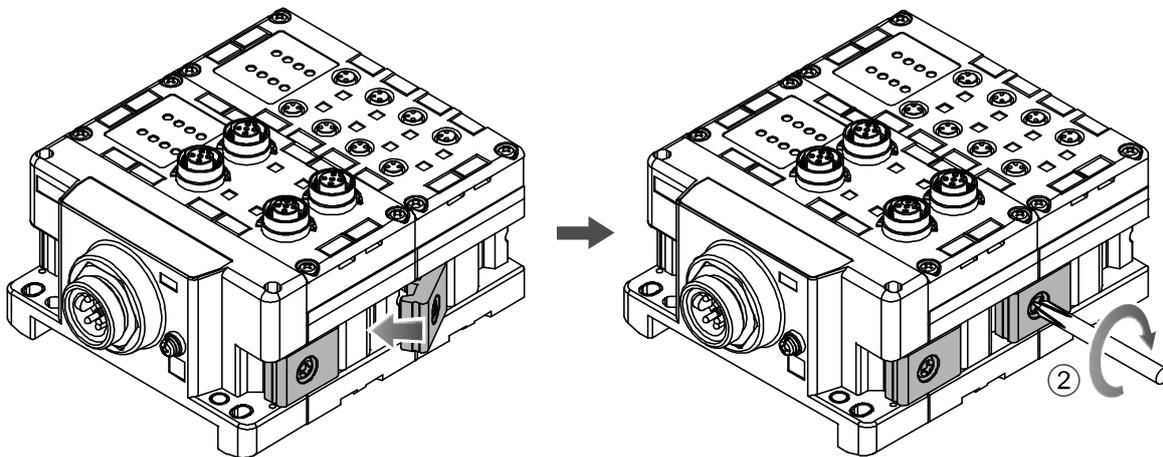

(3)Connecting the SI unit.


After connecting the necessary units, connect the SI unit.

Connecting method is the same as above (1), (2).

(4) Mounting the valve plate.


Mount the valve plate (EX600-ZMV□) to the valve manifold using the valve set screws. (M3x8)
Apply 0.6 to 0.7 Nm tightening torque to the screws.

- | | |
|------------------------|------------|
| - Screw mounting place | |
| - SV | : 2 places |
| - S0700 | : 2 places |
| - VQC1000 | : 2 places |
| - VQC2000 | : 3 places |
| - VQC4000 | : 4 places |
| - SY | : 2 places |

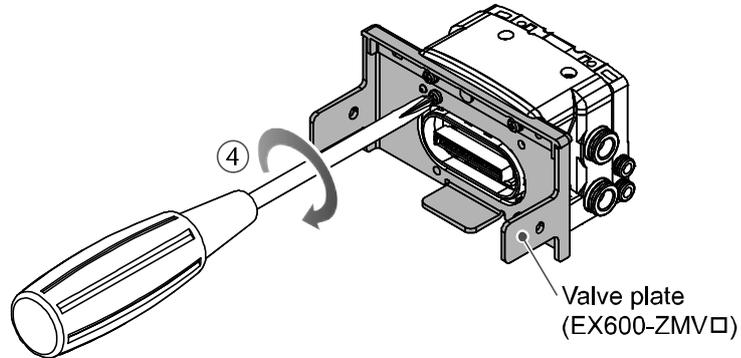

(5) Connect the SI unit and the valve manifold.

Insert the valve plate to the valve plate set groove on the side of SI unit.
Then, tighten it with the valve plate set screws (M4x6) to fix the plate.
Tightening torque for set screws 0.7 to 0.8 Nm.

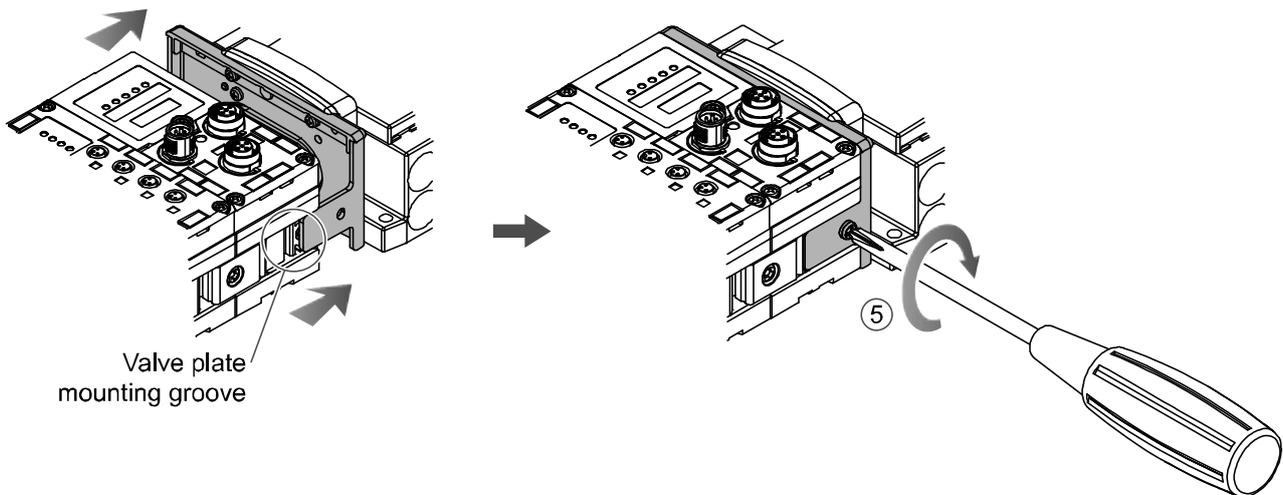

● Precautions for handling

- Please do not connect the unit while the power supply is active. It will cause equipment damage.
- Take care not to drop the nuts of Joint bracket.


Mounting and Installation

■ Installation

• Direct mounting

(1) When joining six or more units, fix the middle part of the complete EX600 unit with an intermediate reinforcing brace (EX600-ZMB1) before mounting using 2-M4x5 screws.


Tightening torque: 0.7 to 0.8 Nm.

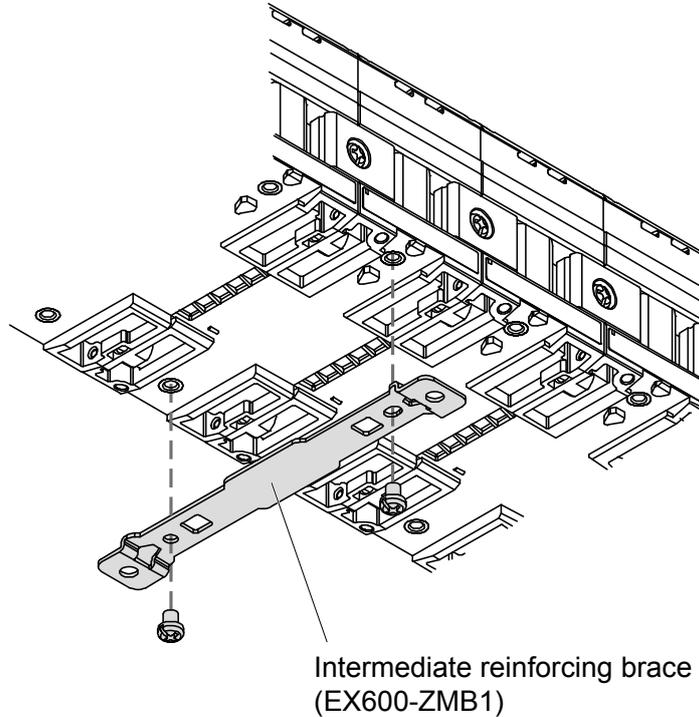

(2) Fix and tighten the end plates at one end of the unit. (M4)

Tightening torque: 0.7 to 0.8 Nm.

Fix the end plate at the valve side while referring to the operation manual of the corresponding valve manifold.

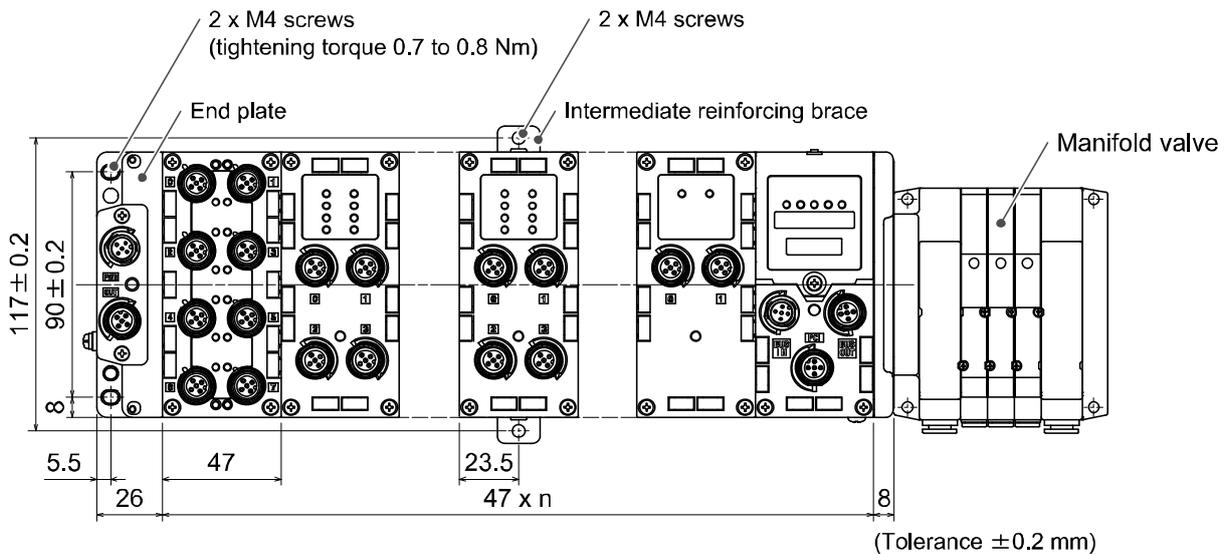

n (Number of connected units) ≤ 10

•DIN rail mounting


(Available for series other than SY series. Refer to the catalog for SY series.)

(1)When joining six or more units, fix the middle part of the complete EX600 unit with an intermediate reinforcing brace (EX600-ZMB2) before mounting, using 2-M4x6 screws.

Tightening torque: 0.7 to 0.8 Nm.

(2)Mount the end plate bracket (EX600-ZMA2) to the end plate at the opposite end to the valves, using 2-M4x14 screws.

Tightening torque: 0.7 to 0.8 Nm.

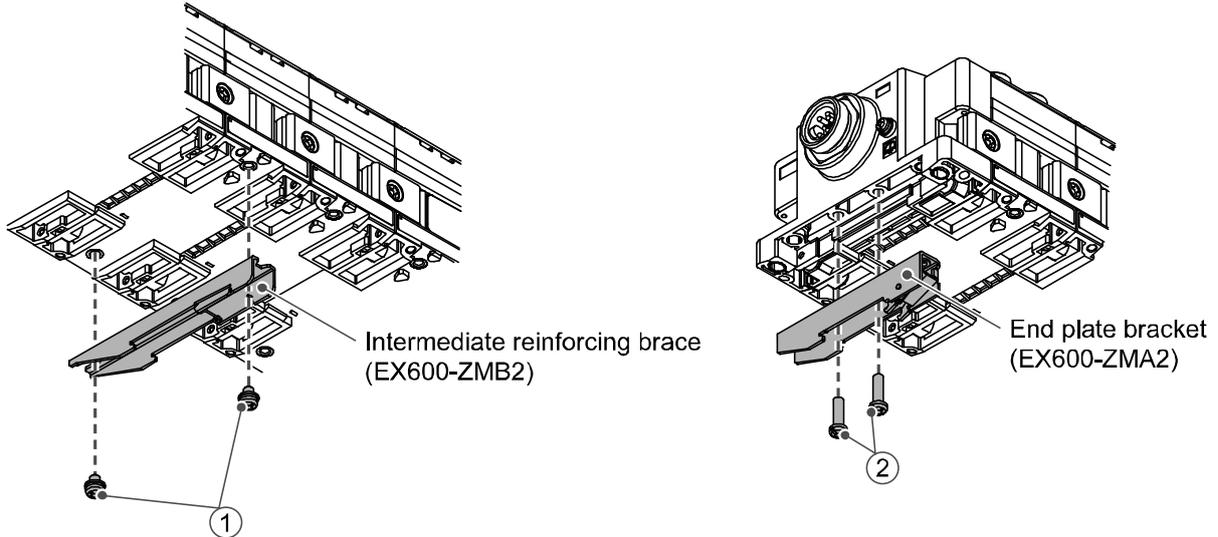

(3)Hook the DIN rail mounting groove to the DIN rail.


(4)Press the manifold using its side hooked to the DIN rail as a fulcrum until the manifold is locked.

(5)Fix the manifold by tightening the DIN rail fixing screws of the EX600-ZMA2. (M4x20)

Tightening torque: 0.7 to 0.8 Nm.

The tightening torque at the valve side depends on the valve type.

Refer to the operation manual of the corresponding valve manifold.

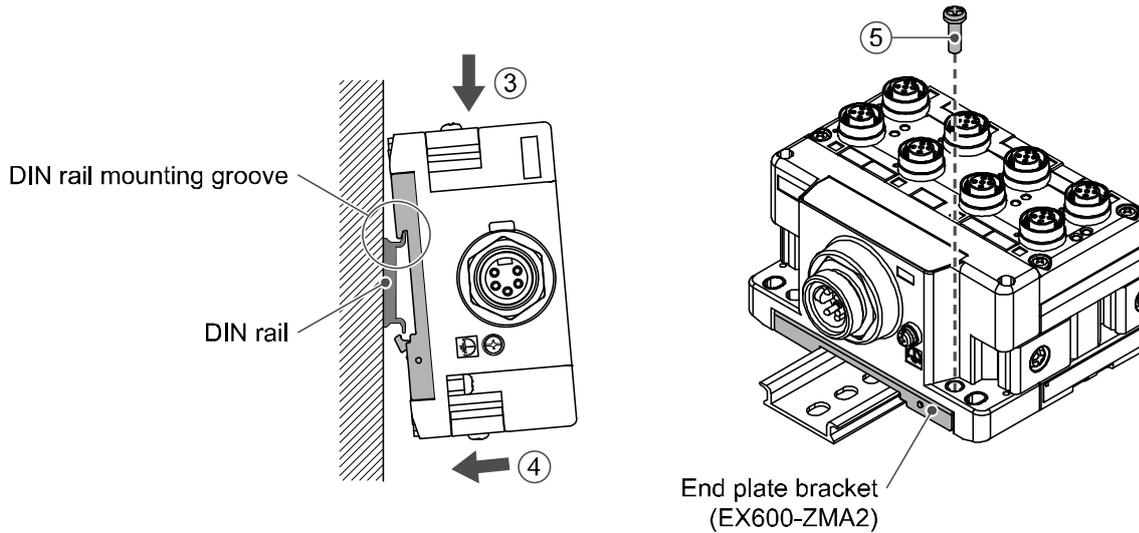

■Wiring


•Connect the M12 or M8 connector cable. M12 connector is applicable for SPEEDCON connector. SPEEDCON connector wiring method is explained below.

(1)Align the mark B on the metal bracket of the cable side connector (plug/socket) with the mark A.

(2)Align the mark C on the unit and insert the connector into the unit vertically.

If they are not aligned, the connector cannot be joined properly.


(3)When the mark B of the connector has been turned 180 degrees (1/2 turn), wiring is completed. Confirm that the connection is not loose. If turned too far, it will become hard to remove the connector.

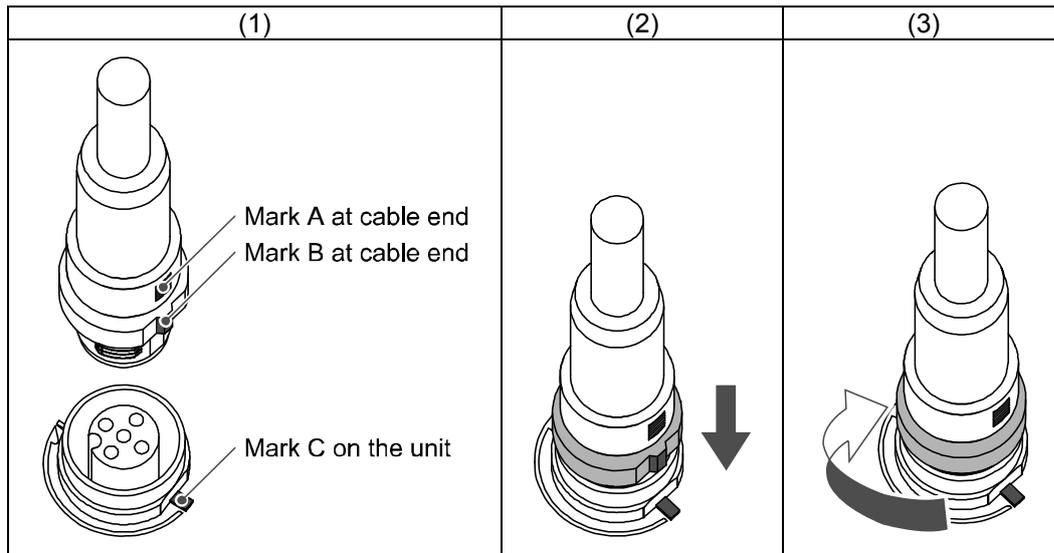

•Mounting the marker


Signal name of the input or output devices and unit address can be written to the marker, and it can be installed to each unit.

Mount the marker (EX600-ZT1) into the marker groove as required.

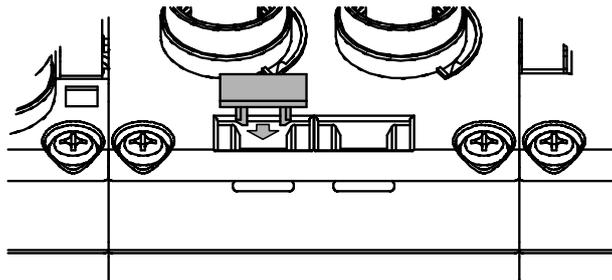


SI unit

Model Indication and How to Order

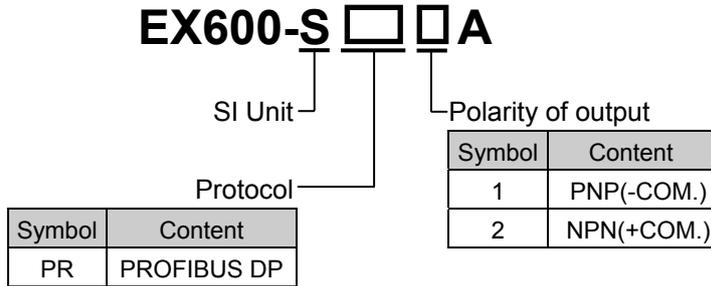

Names and Functions of Product

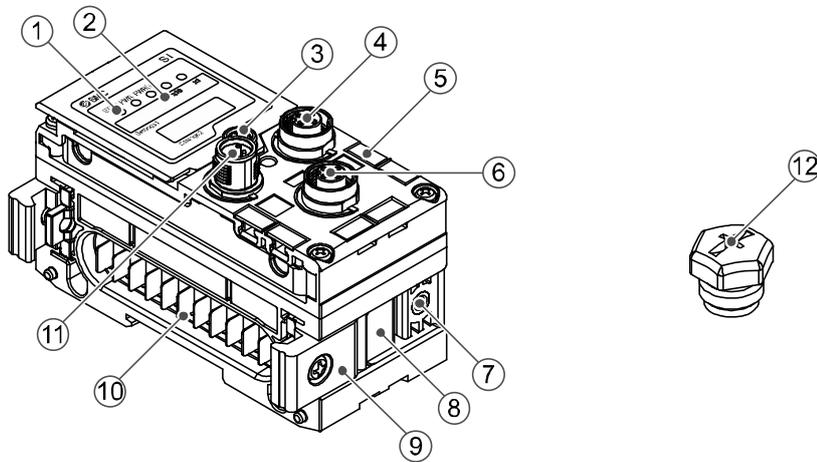



| No. | Description | Function |
|-----|---------------------------------|---|
| 1 | Status display LED | Displays the status of the unit. |
| 2 | Display cover | Open for the setting of switch. |
| 3 | Display cover tightening screw | Loosen to open the display cover. |
| 4 | Connector (BUS OUT) | Connects the cable for fieldbus outputs. |
| 5 | Marker groove | Groove to mount a marker. |
| 6 | Connector (PCI) | Connects the cable of the handheld terminal. |
| 7 | Valve plate mounting screw hole | Fixes the valve plate. |
| 8 | Valve plate mounting groove | Groove to insert the valve plate into. |
| 9 | Joint bracket | Bracket for joining to adjacent units. |
| 10 | Unit connector (plug) | Transmits signals and power supplies to adjacent units. |
| 11 | Connector (BUS IN) | Connects the cable for fieldbus inputs. |
| 12 | Seal cap (2 pcs.) | Mounted on to unused connectors (BUS OUT and PCI). |

Mounting and Installation

■Wiring


○Connector pin assignment and circuit diagram

•Connector pin assignment
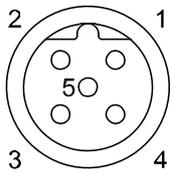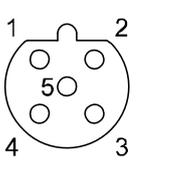
| Configuration | | Pin No. | Signal name |
|---|---|---------|-------------|
| BUS IN | BUS OUT | | |
|  |  | 1 | NC |
| | | 2 | RXD/TXD-N |
| | | 3 | NC |
| | | 4 | RXD/TXD-P |
| | | 5 | Shield |

•Circuit diagram

The product has T branching internally in the unit as shown in the circuit diagram below. It can be extended by connecting the PROFIBUS DP slave with BUS OUT.

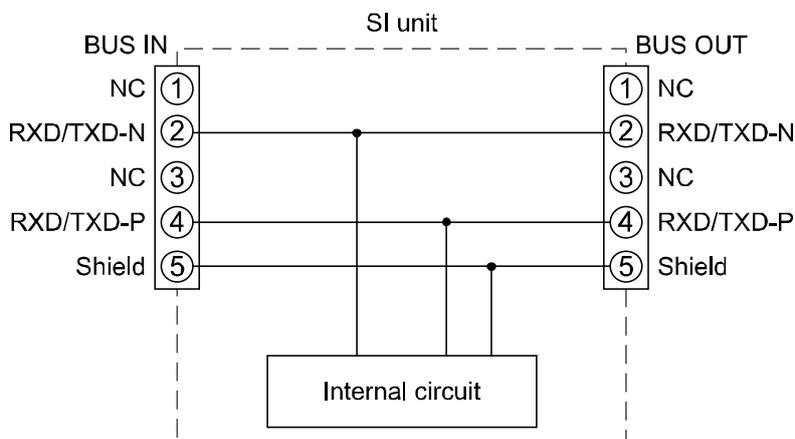

●Precautions for handling

Be sure to fit a seal cap on any unused connectors. Proper use of the seal cap enables the enclosure to achieve IP67 specification.

•Transmission distance

The communication wire shall be a PROFIBUS DP compliant shielded twisted pair cable.

The maximum cable length depends on the transmission speed and the cable type.


The table below shows the values when type A cable is used.

| Communication speed [kbps] | 9.6 | 19.2 | 45.45 | 93.75 | 187.5 | 500 | 1500 | 3000 | 6000 | 12000 |
|----------------------------|------|------|-------|-------|-------|-----|------|------|------|-------|
| Cable length [m] | 1200 | | 1000 | | 400 | | 200 | | 100 | |

Setting and Adjustment

•Switch setting

- (1) Loosen the display cover screw (indicated by arrow).
- (2) Open the display cover using a flat head screwdriver, etc.

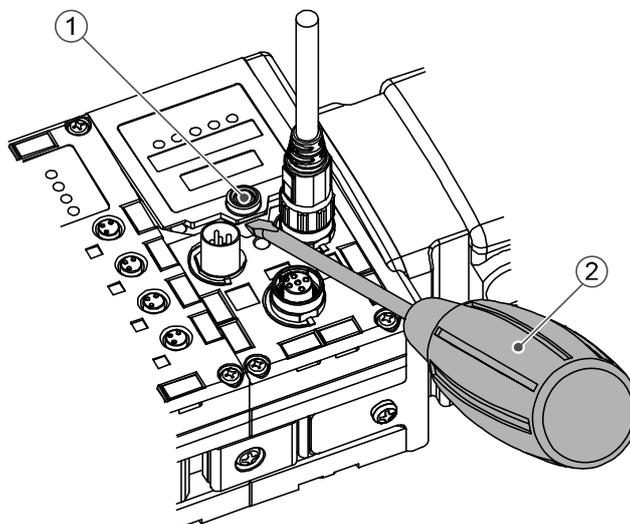


- (3) Set the switch using a small watchmaker's screwdriver with a thin blade, referring to the setting of switch on the following pages.
- (4) After setting the switch, tighten the display cover tightening screw in the reverse order of the above procedure. (Tightening torque: 0.3 to 0.4 Nm)

•Precautions for handling

- Turn off the power supply whilst setting the switch.
- If there is foreign matter or water droplets around the display cover, clean it off before opening the cover.
- When setting the switch, do not touch other unrelated parts. This can cause parts damage or malfunction due to a short circuit.
- All default settings are off or 0. Perform the setting of the switch before using this product.

•Address setting switch: Set the PROFIBUS DP node address.

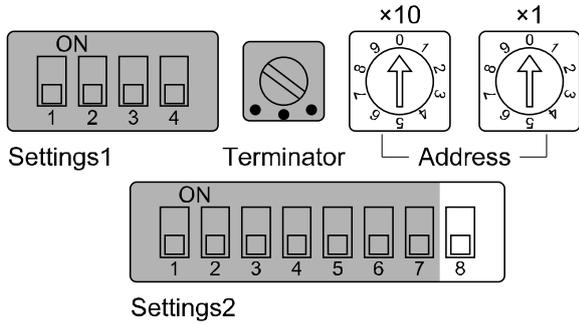


Address setting switch (x10): Sets the 10 digit of the PROFIBUS DP node address.
 Address setting switch (x1): Sets the 1 digit of the PROFIBUS DP node address.
 Settings 2 switch (8): Sets the 3rd digit of the PROFIBUS DP node address.

Address Setting

| Setting2 | Address | | Node Address |
|----------|---------|----|---------------------|
| | x10 | x1 | |
| OFF | 0 | 0 | 0 (Default setting) |
| | 0 | 1 | 1 |
| | 0 | 2 | 2 |
| | : | : | : |
| | 9 | 8 | 98 |
| | 9 | 9 | 99 |
| | ON | 0 | 0 |
| 0 | | 1 | 101 |
| : | | : | : |
| 2 | | 5 | 125 |

*: When the address is set to 0, or to 126 or over, it causes an error and turns on the [SF] and [BF] LED's.


- V_SEL switch: A function to select the number of occupied valve outputs.
The number of outputs (size) occupied by the SI unit is selected.

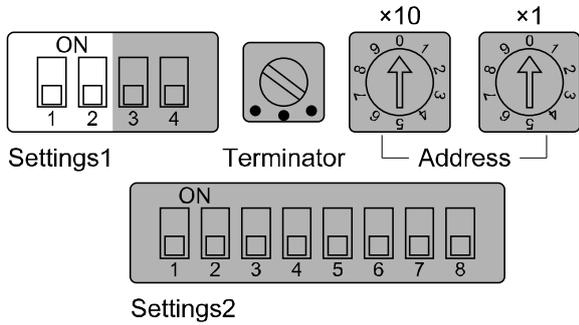

| Settings1 | | Content | SI unit output data size |
|-----------|-----|-------------------------------------|--------------------------|
| 1 | 2 | | |
| OFF | OFF | Number of occupied valve 32 outputs | 4 byte (Default setting) |
| OFF | ON | Number of occupied valve 24 outputs | 3 byte |
| ON | OFF | Number of occupied valve 16 outputs | 2 byte |
| ON | ON | Number of occupied valve 8 outputs | 1 byte |

*: Set the number of occupied valve outputs to at least the number of valves used.


- Baud Rate switch: Sets the communication speed of the internal bus of the product.

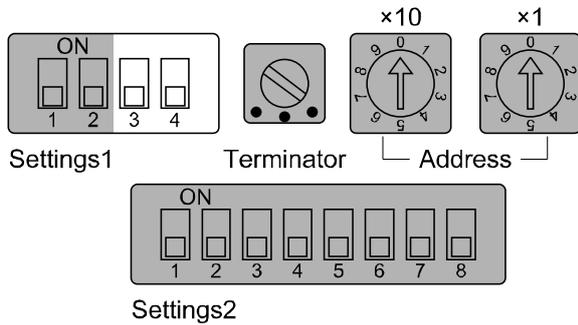

| Settings1 | | Content |
|-----------|-----|--------------------------|
| 3 | 4 | |
| OFF | OFF | 1 Mbps (Default setting) |
| OFF | ON | 500 kbps |
| ON | OFF | 250 kbps |
| ON | ON | 125 kbps |

*: This function is for possible extension. Keep the default setting of 1 Mbps.


- HOLD/CLEAR switch: Sets the output status when the Fieldbus has a communication error or is in idling state.

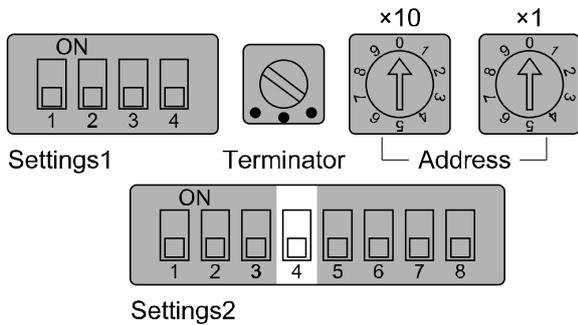

| Settings2 | Content |
|-----------|----------------------------------|
| 4 | |
| OFF | Output is Off. (Default setting) |
| ON | Holds the output. |

*: This switch can be enabled and disabled by parameter.

- Terminator switch: Sets the terminal resistor of the PROFIBUS DP communication line.

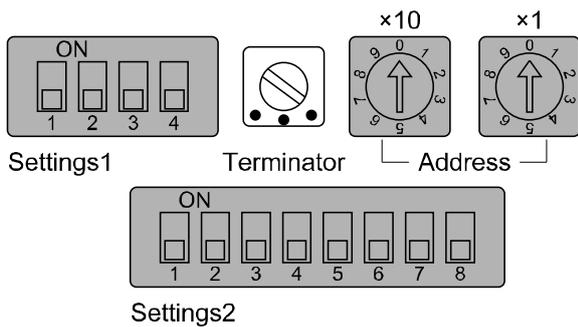


| Setting of the terminal resistor | | |
|----------------------------------|--|-----------------------|
| | | |
| Terminal resistor ON | Terminal resistor OFF (Default setting) | Terminal resistor OFF |

•Precautions for handling

- When the product is connected to at the end of the PROFIBUS communication line, be sure to set it to "Terminal resistor ON".
- The terminal resistance depends on the specifications of the cable. The terminal resistance is of the type A cable.
- Handle the switch with care Excessive force can break the switch.
- Switches of 1,2,3 and 5,6,7 on the Settings2 switch are not used.

LED Display

The status display LED displays the power supply and communication status.
Various kinds of status can be checked as follows:

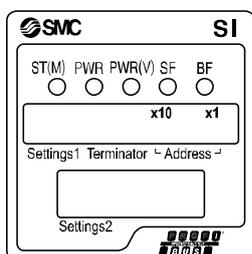

| Display | Content |
|---------|--|
| ST(M) | Displays the diagnosis status of the unit. |
| PWR | Displays the status of the power supply voltage for control and input. |
| PWR(V) | Displays the status of the power supply voltage for outputs. |
| SF | Displays system fault. |
| BF | Displays bus fault. |

•SI unit common status

| LED display | Content |
|---|--|
| ST(M) PWR PWR(V) ○ ○ ○ OFF | The power supply for control and input is OFF. |
| ST(M) PWR PWR(V) ● ● ● Green LEDs are ON | The unit is in normal operation. |
| ST(M) PWR PWR(V) ● ○ ○ Red ST(M) LED is ON | A component failure inside the SI unit. |
| ST(M) PWR PWR(V) ○ ● ○ Red PWR LED is ON | The power supply voltage for control and input is abnormal. |
| ST(M) PWR PWR(V) ○ ○ ● Red PWR(V) LED is ON | The power supply voltage for outputs is abnormal. |
| ST(M) PWR PWR(V) ● (flashing) ○ ○ | A unit other than the SI unit has been diagnosed and detected. |
| ST(M) PWR PWR(V) ● (flashing) ○ ○ | Either of the following conditions: •The valve ON/OFF counter has exceeded the set value. •The valve is short circuited or disconnected. |
| ST(M) PWR PWR(V) ● (flashing alternately) ○ ○ Red/green ST(M) LED is flashing alternately | Connection error between units has occurred. |

*: Refer to "Troubleshooting" (33 page), for the further details of countermeasures.

•PROFIBUS DP status

| LED Display | Contents |
|--|--|
|  <p>SF BF ○ ○ OFF</p> | <p>The communication with the master has been established properly, or the power supply for control and input is OFF.</p> |
|  <p>SF BF ● ○ Red SF LED is ON</p> | <p>The communication with the master has been established, but a diagnosis error has occurred.</p> |
|  <p>SF BF ○ ● Red BF LED is ON</p> | <p>Either of the following conditions:</p> <ul style="list-style-type: none"> •The cable between the master and SI unit is not connected. •The SI unit cannot recognize the communication speed. •The master or the SI unit has broken. |
|  <p>SF BF ● ● Red BF and SF LEDs are both ON</p> | <p>The address of the SI unit is set to 0, or to 126 or over.</p> |
|  <p>SF BF ● ● Red SF LED is ON and red BF LED is flashing</p> | <p>The configuration data of the master and device are not consistent.</p> |
|  <p>SF BF ○ ● Red BF LED is flashing</p> | <p>The SI unit has recognized the communication speed, but the address setting of the master is incorrect.</p> |

*: Refer to "Troubleshooting" (33 page), for the further details of countermeasures.

Specification

■ Specifications

| Model | | EX600-SPR1A | EX600-SPR2A |
|--|---|--|-------------|
| Communication | Fieldbus | PROFIBUS DP (DP-V0) | |
| | Device type | PROFIBUS DP slave | |
| | Communication speed | 9.6/19.2/45.45/93.75/187.5/500 kbps 1.5/3/6/12 Mbps | |
| | Configuration file | GSD (SMCB1411.gsd) | |
| | Occupied area (Number of inputs/outputs) | (512 inputs/512 outputs) max. | |
| Power supply (control and input) | | 24 VDC Class2, 2 A | |
| Terminal resistor | | Internally implemented (For type A cable) | |
| Internal current consumption (The power supply for control and input) | | 80 mA or less | |
| Valve output | Polarity of output | PNP (-COM.) | NPN (+COM.) |
| | Output channel | 32 outputs (8/16/24/32 outputs selectable) | |
| | Connected load | Solenoid valve with lamp and circuit of protection of surge voltage of 24 VDC 1.5 W (SMC) | |
| | Power supply (output) | 24 VDC Class2, 2 A | |
| | Output for com. error | HOLD/CLEAR/Force ON | |
| | Protective function | Short circuit protection | |
| Environment | Enclosure | IP67 (with manifold assembled) *1 | |
| | Operating temperature range | -10 to 50 °C (Max. surrounding air temperature rating: 50 °C) *2 | |
| | Storage temperature range | -20 to 60 °C | |
| | Operating humidity range | 35 to 85%RH (no condensation) | |
| | Withstand voltage | 500 VAC for 1 minute between external terminals and FE | |
| | Insulation resistance | 500 VDC, 10 MΩ or more between external terminals and FE | |
| | Vibration resistance | 10 to 57 Hz: constant amplitude 0.75 mm p-p 57 to 150 Hz: constant acceleration 49 m/s ² for 2 hours each in direction X, Y and Z respectively (De-energized) | |
| | Impact resistance | 147 m/s ² 3 times each in directions of X, Y and Z respectively (De-energized) | |
| Pollution degree | For use in Pollution Degree 2 Environment (UL508) | | |
| Standard | | CE marking, UL(CSA), RoHS | |
| Weight | | 300 g | |


*1: All unused connectors must have the seal cap fitted.

*2: The UL compliant temperature is 0 to 50 °C.

•PROFIBUS DP function

| Model number | EX600-SPR1A | EX600-SPR2A |
|-----------------------|-------------|-------------|
| Address setting range | 1 to 125 | |
| FREEZE function | Supported | |
| SYNC function | Supported | |
| FAIL SAFE function | Supported | |
| ID number | 1411 (Hex) | |

■Dimensions

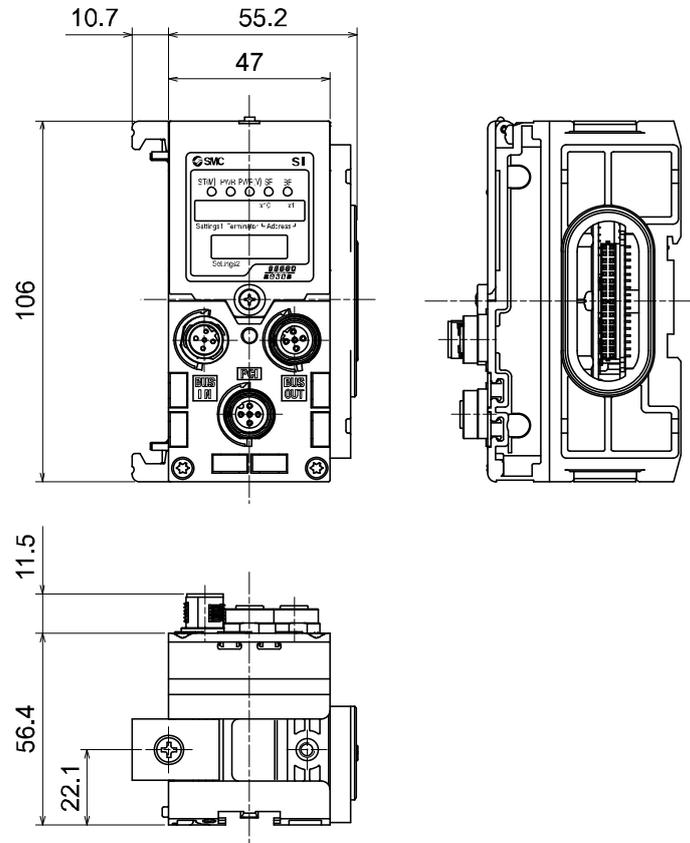

End plate

Model Indication and How to Order

EX600-ED□-□

End plate at D side

Mounting method

Connector



| Symbol | Content |
|--------|------------------|
| 2 | M12 (5 pin) |
| 3 | 7/8 inch (5 pin) |

| Symbol | Content |
|--------|---|
| Nil | No DIN rail bracket |
| 2 | With DIN rail bracket |
| 3 | With DIN rail bracket (Specified for SY series) |

Names and Functions of Product

●EX600-ED2-□

●EX600-ED3-□

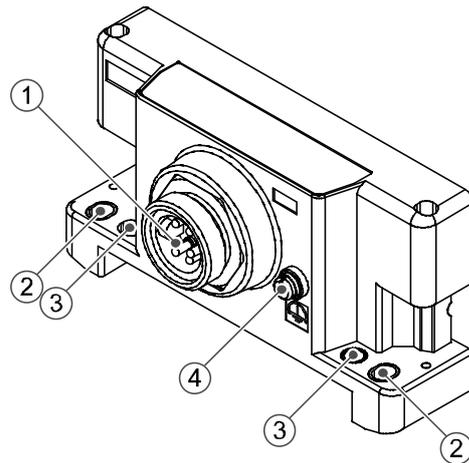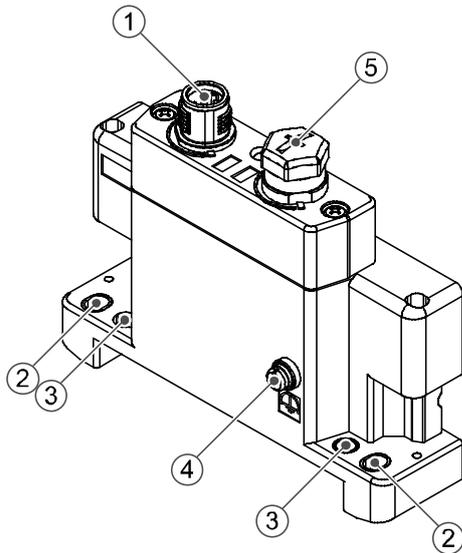

| No. | Description | Function |
|-----|---------------------------------|---|
| 1 | Power connector | Supplies power for each unit and input/output device. |
| 2 | Fixing hole for direct mounting | Holes used for direct mounting. |
| 3 | DIN rail fixing hole | Holes used to fix DIN rail. |
| 4 | FE terminal | Terminal used to grounding. |
| 5 | Connector (Not used) | This connector is not used. Do not take off the seal cap. |

Mounting and Installation

■Wiring

○Connector pin assignment

(1)EX600-ED2-□

| Configuration | Pin No. | Signal name |
|---------------|---------|--------------------------|
| | 1 | 24 V (output) |
| | 2 | 0 V (output) |
| | 3 | 24 V (control and input) |
| | 4 | 0 V (control and input) |
| | 5 | FE |


(2)EX600-ED3-□

| Configuration | Pin No. | Signal name |
|---------------|---------|--------------------------|
| | 1 | 0 V (output) |
| | 2 | 0 V (control and input) |
| | 3 | FE |
| | 4 | 24 V (control and input) |
| | 5 | 24 V (output) |

○Regarding the 2 types of power supply

This product has 2 power supplies, and it is divided as follows.

- Power supply for control and input: Supplying power for control of each unit's power supply for control and also for device connected to input port of digital and analog unit.
- Power supply for output: Supplying power for equipment connected to output port of digital and analog unit, and also power supply for solenoid valve manifold.

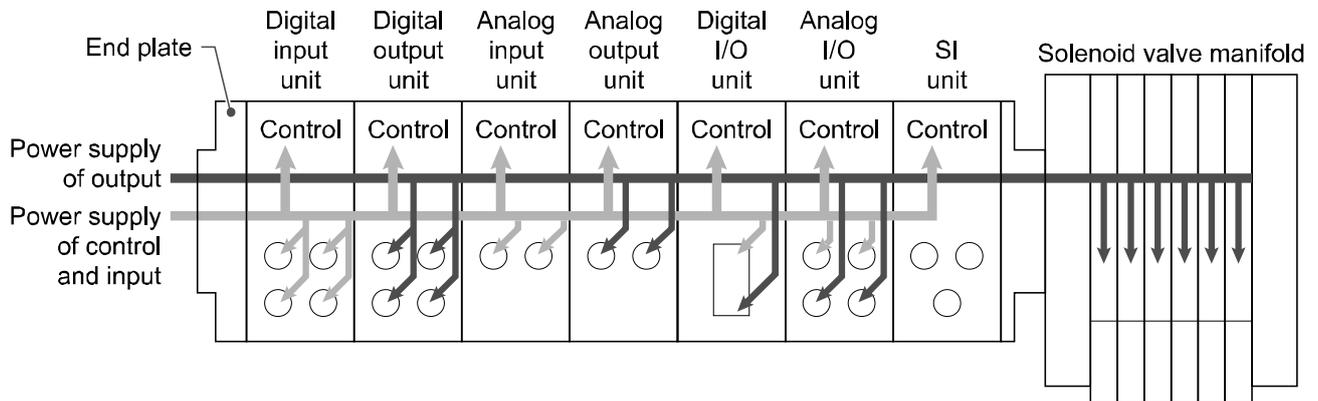

●Precautions for handling

Be sure to fit a seal cap on any unused connectors. Proper use of the seal cap enables the enclosure to achieve IP67 specification.

Specification

■ Specifications


| Model | | EX600-ED2-□ | EX600-ED3-□ |
|----------------------|--|--|-----------------------|
| Power specifications | Power connector | M12 (5 pin) Plug | 7/8 inch (5 pin) Plug |
| | Power supply (control and input) | 24 VDC ±10% Class2, 2 A | 24 VDC ±10%, 8 A |
| | Power supply (output) | 24 VDC +10/-5% Class2, 2 A | 24 VDC +10/-5%, 8 A |
| Environment | Enclosure | IP67 (with manifold assembled) *1 | |
| | Operating temperature range | -10 to 50 °C (Max. surrounding air temperature rating: 50 °C) *2 | |
| | Storage temperature range | -20 to 60 °C | |
| | Operating humidity range | 35 to 85%RH (no condensation) | |
| | Withstand voltage | 500 VAC for 1 minute between external terminals and FE | |
| | Insulation resistance | 500 VDC, 10 MΩ min. between external terminals and FE | |
| | Vibration resistance | 10 to 57 Hz: constant amplitude 0.75 mm p-p 57 to 150 Hz: constant acceleration 49 m/s ² for 2 hours each in direction X, Y and Z respectively (De-energized) | |
| | Impact resistance | 147 m/s ² 3 times each in directions of X, Y and Z respectively (De-energized) | |
| | Pollution degree | For use in Pollution Degree 2 Environment (UL508) | |
| Standard | CE marking, UL recognition (CSA), RoHS | | |
| Weight | 170 g | 175 g | |

*1: All unused connectors must have a seal cap fitted.


*2: The UL agreement temperature is 0 to 50 °C.

■ Dimensions

● EX600-ED2-□

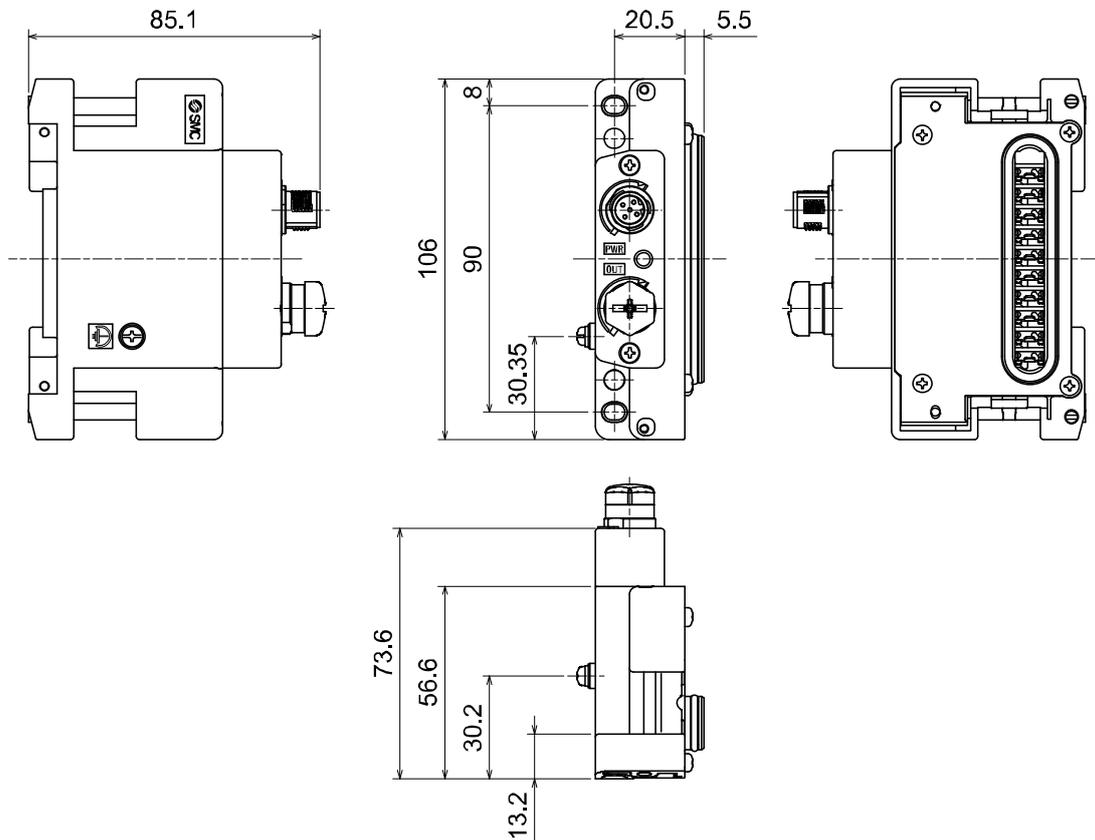

●EX600-ED3-□

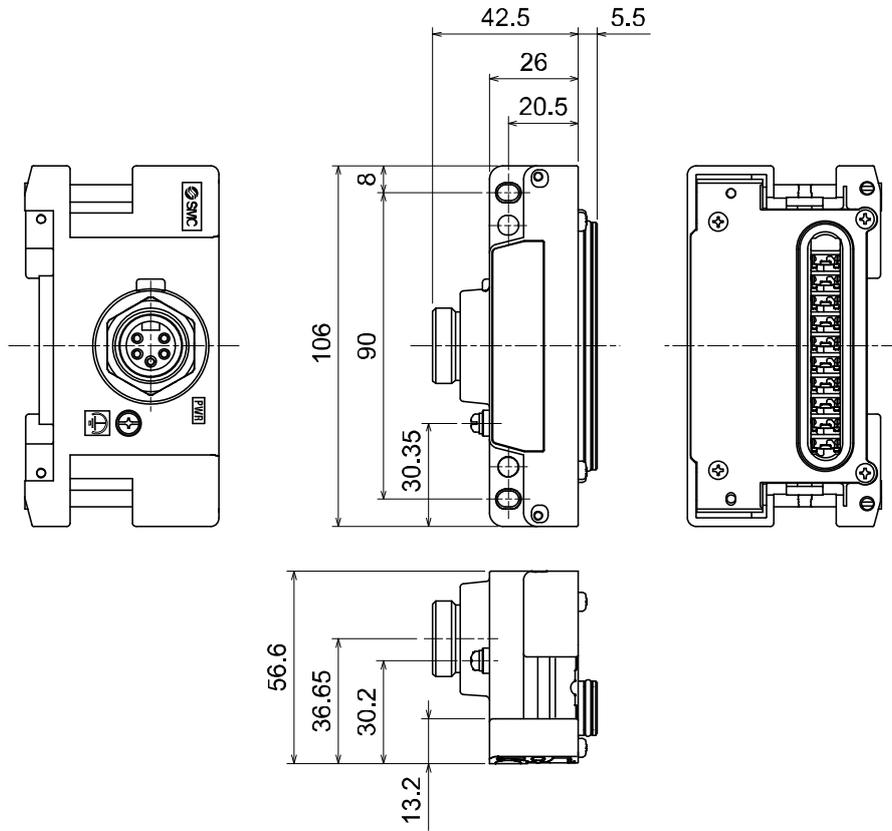

Maintenance

Turn off the power supply, stop the supplied air, exhaust the residual pressure and verify the release of air before performing maintenance.

Cleaning method

Use a soft cloth to remove stains.

For heavy stains, use a cloth soaked with diluted neutral detergent and fully squeezed, then wipe up the stains again with a dry cloth.

Do not use solvents such as benzene, thinner etc. to clean each unit.

| Inspection item | Content of inspection |
|--------------------------------------|---|
| Connector/Electric wiring | Connect properly if the connection is loose. |
| Seal cap | Tighten properly if the connection is loose. |
| Thread for mounting and installation | If the thread is loose, re-tighten it to the specified torque. |
| Connection cables | If the cable is broken or any other abnormality is confirmed by appearance, replace the cable with a new one. |
| Supply source voltage | Check if source voltage within the specification range (24 VDC \pm 10%) is supplied. |

How to reset the product for power cut or forcible de-energizing

Supply power to the product.

The output status just before the power failure is not maintained when power supply is recovered.

Start operation after confirming safety of the entire equipment.

Troubleshooting


•Troubleshooting


When any failure happens with this fieldbus system, the following chart is used to identify the cause of the failure.

Error status is reflected from the parameter setting of the fieldbus system.

When a failure occurs, take the appropriate countermeasures referring to the LED display, the troubleshooting and the parameter setting.

If a cause applicable to the failure cannot be identified, it indicates that the fieldbus system itself is broken. The fieldbus system breakage can be caused by the operating environment. Contact SMC separately to obtain countermeasures.

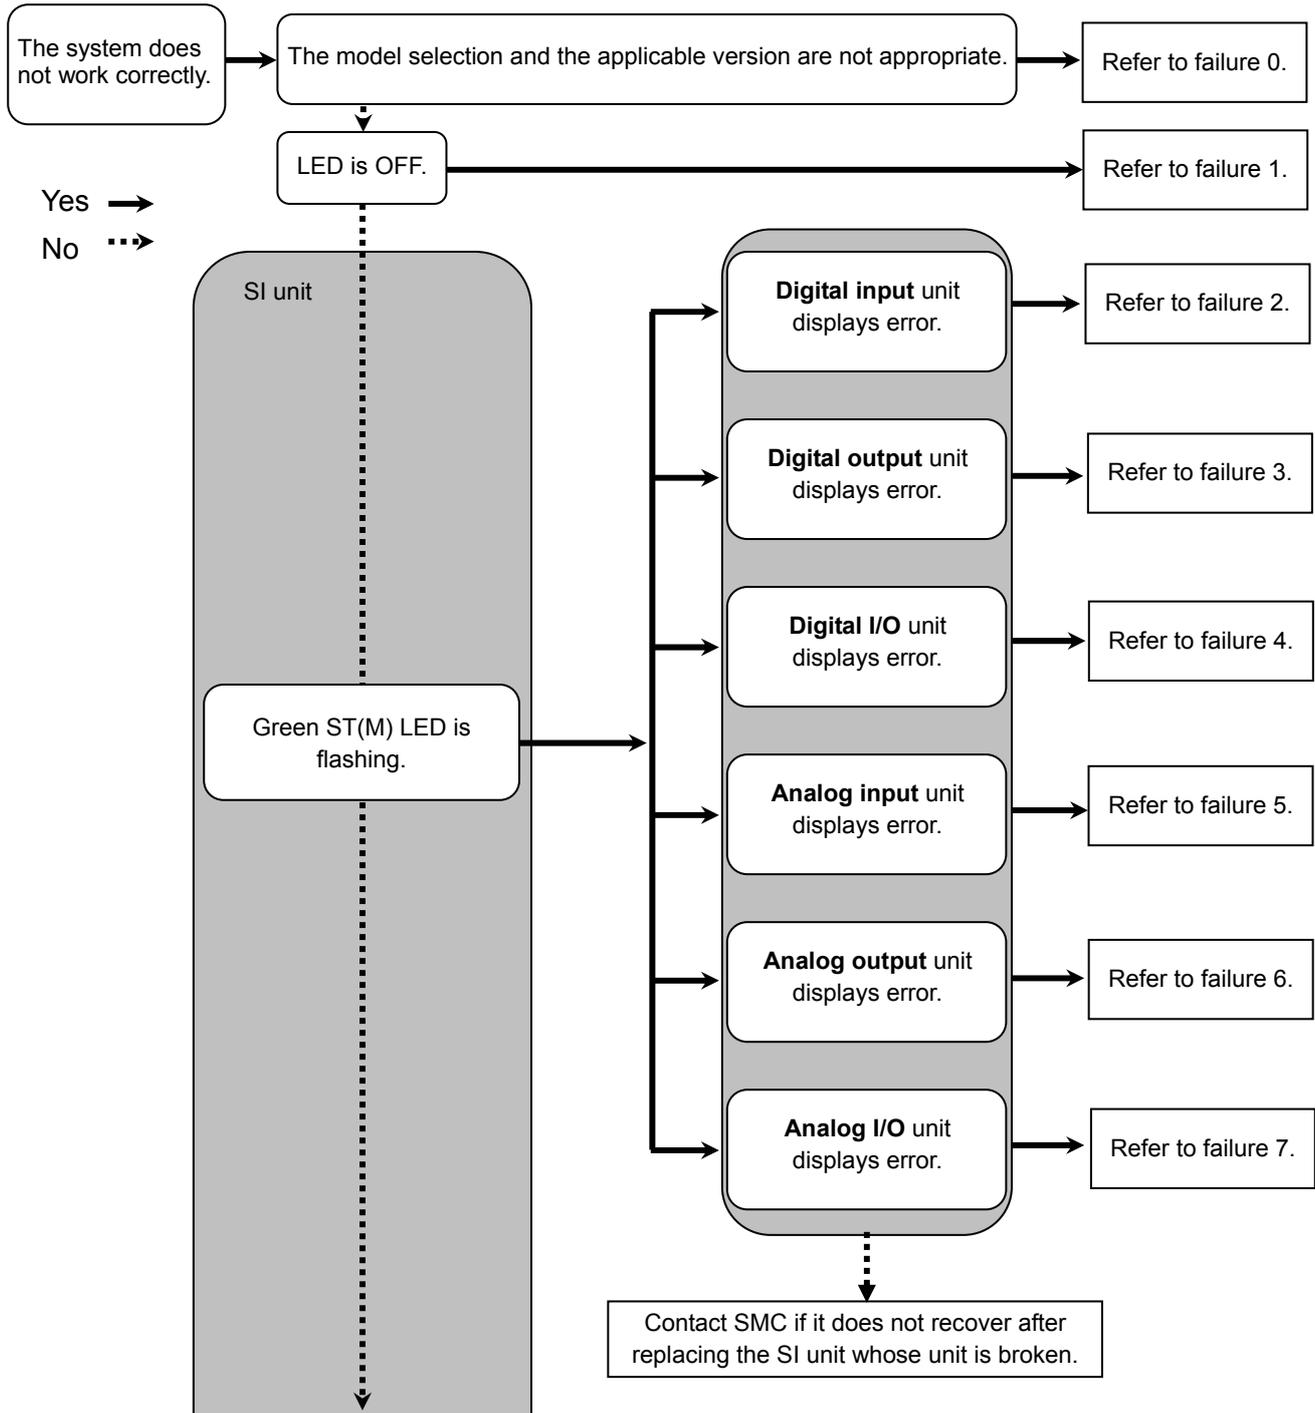

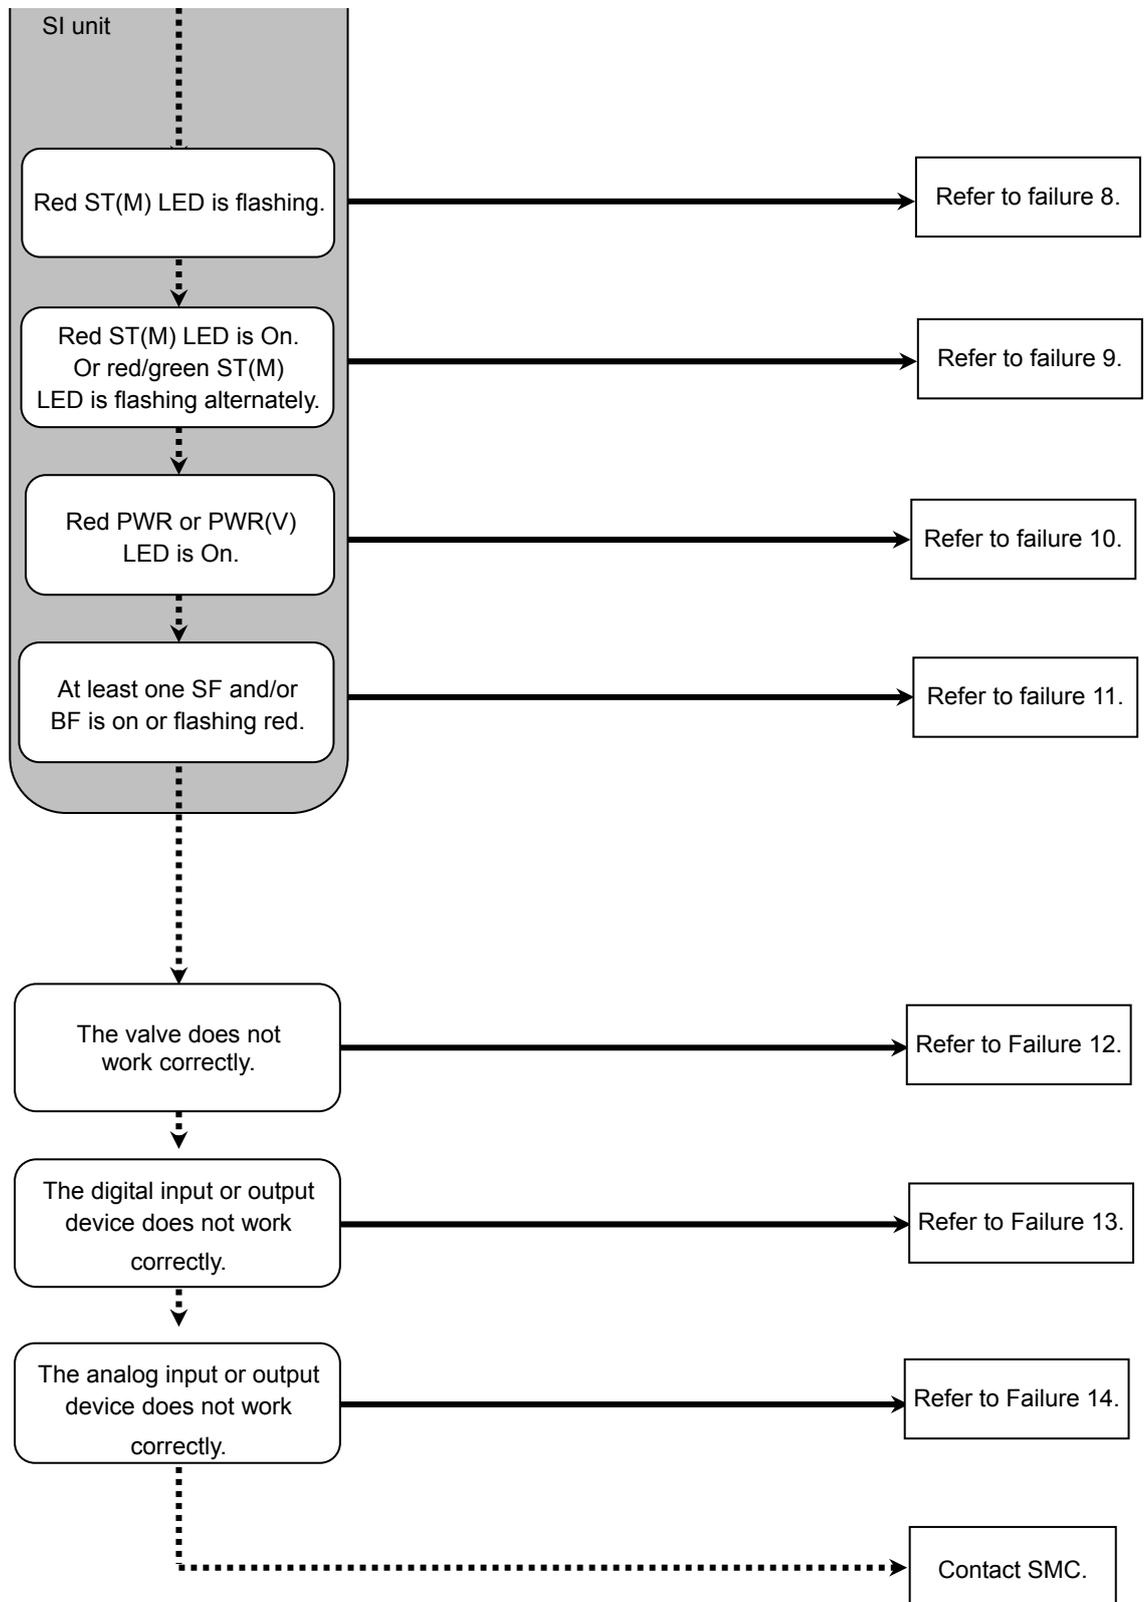

•Trouble counter measure method

| No. | Part No. EX600- | Problem | Presumed cause | Troubleshooting |
|-----|-----------------------|--|--|--|
| 0 | - | The system does not work correctly. | Inappropriate unit selection. | The types of units that can be connected vary depending on the SI unit part number. Check if the unit is applicable before assembly. Refer to “Units that can be assembled” (page 12) in the section “Assembly” for details. |
| 1 | - | LED is OFF. | Power supply for control and input is OFF. | Check if the power for control and input is supplied. |
| 2 | DX□B DX□C□ DX□D | Red LED is ON. (When diagnosis is activated) | Diagnosis error Input device power supply is short-circuited. | Check the parts with error by using the LED display or PLC * or H.T. Re-wire the short-circuited part or check if the cable and input device are normal. |
| | | Red LED is flashing. (When diagnosis is activated) | Diagnosis error (1)ON/OFF count of the input device has exceeded the set value. (2)The wire of the input device is broken or disconnected. (Only EX600-DX□C1) | Check the parts with error by using the LED display or PLC * or H.T. (1)Reset the ON/OFF count to zero or change the set value. Or invalidate diagnosis. (2)Check if the connector is loose and if the wire is broken. |
| | | Other displays | Unit has failed. | Stop the operation and contact SMC. |
| | DX□E DX□F | Red ST LED is ON. (When diagnosis is activated) | Diagnosis error Input device power supply is short-circuited. | Check the parts with error by using the LED display or PLC * or H.T. Re-wire the short-circuited part or check if the cable and input device are normal. |
| | | Red ST LED is flashing. (When diagnosis is activated) | Diagnosis error ON/OFF count of the input device has exceeded the set value. | Check the parts with error by using the LED display or PLC * or H.T. Reset the ON/OFF count to zero or change the set value. Or invalidate diagnosis. |
| | | Other displays. | Unit has failed. | Stop the operation and contact SMC. |

*: Refer to “System diagnosis information” (page 65) for details.

| No. | Part No. EX600- | Problem | Presumed cause | Troubleshooting |
|-----|--------------------|---|--|--|
| 3 | DY□B | Red LED is ON. (When diagnosis is activated) | Diagnosis error Output device is short-circuited. | Check the parts with error by using the LED display or PLC * or H.T. Re-wire the short-circuited part or check if the cable and output device are normal. |
| | | Red LED is flashing. (When diagnosis is activated) | Diagnosis error (1)ON/OFF count of the output device has exceeded the set value. (2)The wire of the output device is broken or disconnected. | Check the parts with error by using the LED display or PLC * or H.T. (1)Reset the ON/OFF count to zero or change the set value. Or invalidate diagnosis. (2)Check if the connector is loose and if the wire is broken. |
| | | Other displays. | Unit has failed. | Stop the operation and contact SMC. |
| | DY□E DY□F | Red ST LED is ON. (When diagnosis is activated) | Diagnosis error Output device is short-circuited. | Check the parts with error by using the LED display or PLC * or H.T. Re-wire the short-circuited part or check if the cable and output device are normal. |
| | | Red ST LED is flashing. (When diagnosis is activated) | Diagnosis error (1)ON/OFF count of the output device has exceeded the set value. (2)The wire of the output device is broken or disconnected. | Check the parts with error by using the LED display or PLC * or H.T. (1)Reset the ON/OFF count to zero or change the set value. Or invalidate diagnosis. (2)Check if the connector is loose and if the wire is broken. |
| | | Other displays. | Unit has failed. | Stop the operation and contact SMC. |
| 4 | DM□E DM□F | Red ST(I) LED is ON. (When diagnosis is activated) | Diagnosis error Input device power supply is short-circuited. | Check the parts with error by using the LED display or PLC * or H.T. Re-wire the short-circuited part or check if the cable and input device are normal. |
| | | Red ST(I) LED is flashing. (When diagnosis is activated) | Diagnosis error ON/OFF count of the input device has exceeded the set value. | Check the parts with error by using the LED display or PLC * or H.T. Reset the ON/OFF count to zero or change the set value. Or invalidate diagnosis. |
| | | Red ST(O) LED is ON. (When diagnosis is activated) | Diagnosis error Output device is short-circuited. | Check the parts with error by using the LED display or PLC * or H.T. Re-wire the short-circuited part or check if the cable and output device are normal. |
| | | Red ST(O) LED is flashing. (When diagnosis is activated) | Diagnosis error (1)ON/OFF count of the output device has exceeded the set value. (2)The wire of the output device is broken or disconnected. | Check the parts with error by using the LED display or PLC * or H.T. (1)Reset the ON/OFF count to zero or change the set value. Or invalidate diagnosis. (2)Check if the connector is loose and if the wire is broken. |
| | | Other displays. | Unit has failed. | Stop the operation and contact SMC. |

*: Refer to "System diagnosis information" (page 65) for details.

| No. | Part No. EX600- | Problem | Presumed cause | Troubleshooting |
|-----|--------------------|---|--|--|
| 5 | AXA | Red LED is ON. (When diagnosis is activated) | Diagnosis error Analog input device power supply is short-circuited. | Check the parts with error by using the LED display or PLC * or H.T. Re-wire the short-circuited part, and check if the cable and analog input device are normal. |
| | | "0 and 1" red LEDs are ON. | Input value has exceeded the upper limit when set to Current input type range. | Check the following when the range of the analog input unit is set to current input. (1)Set the input value of the analog input device so that it does not exceed the upper limit. (2)Voltage is input from the analog input device. Ensure the range of the input unit matches the range of the input device. |
| | | Red LED is flashing. (When diagnosis is activated) | Diagnosis error (1)Input value has exceeded the upper or lower limit of the range. (2)Input value (value set by user) has exceeded the upper or lower limit. | (1)If the input value from the analog input device exceeds the upper or lower limit of the range, select the appropriate range so that the input value is within the range. Or invalidate diagnosis. (2)If the input value from the analog input device exceeds the upper or lower limit of the user set value, adjust it so that the input value is within the range of the user set value. Or invalidate diagnosis. |
| | | Other displays. | Unit has failed. | Stop the operation and contact SMC. |
| 6 | AYA | Red LED is ON. (When diagnosis is activated) | Diagnosis error Analog output device power supply is short-circuited. | Check the parts with error by using the LED display or PLC * or H.T. Re-wire the short-circuited part, and check if the cable and analog output device are normal. |
| | | Red LED is flashing. (When diagnosis is activated) | Diagnosis error Output value (value set by user) has exceeded the upper or lower limit. | If the output value from the analog output device exceeds the upper or lower limit of the user set value, adjust it so that the output value is within the range of the user set value. Or invalidate diagnosis. |
| | | Other displays. | Unit has failed. | Stop the operation and contact SMC. |

*: Refer to "System diagnosis information" (page 65) for details.

| No. | Part No. EX600- | Problem | Presumed cause | Troubleshooting |
|-----|--------------------|---|--|--|
| 7 | AMB | Red LED is ON. (When diagnosis is activated) | Diagnosis error Analog input or output device power supply is short-circuited. | Check the parts with error by using the LED display or PLC * or H.T. Re-wire the short-circuited part, and check if the cable and analog input or output device are normal. |
| | | "0 and 1" red LEDs are ON. | Input value has exceeded the upper limit when set to current input type range. | Check the following when the range of the analog input unit is set to current input. (1)Set the input value of the analog input device so that it does not exceed the upper limit. (2)Voltage is input from the analog input device. Ensure the range of the input unit matches the range of the input device. |
| | | Red LED is flashing. (When diagnosis is activated) | Diagnosis error (1)Input value has exceeded the upper or lower limit of the range. (2)Input or output value (value set by user) has exceeded the upper or lower limit. | (1)If the input value from the analog input device exceeds the upper or lower limit of the range, select the appropriate range so that the input value is within the range. Or invalidate diagnosis. (2)If the input (output) value from the analog input (output) device exceeds the upper or lower limit of the user set value, adjust it so that the input(output) value is within the range of the user set value. Or invalidate diagnosis. |
| | | Other displays. | Unit has failed. | Stop the operation and contact SMC. |
| 8 | | Red ST(M) LED is flashing. (When diagnosis is activated) | Diagnosis error (SI unit) (1)Valve is short-circuited. (2)Wire of the valve is open-circuited. (3)ON/OFF count of the valve has exceeded the set value. | Check the parts with error by using the LED display or PLC * or H.T. (1)Check the operation after replacing the valve. (2)Check the operation after replacing the valve. (3)Reset the ON/OFF count to zero or change the set value. Or invalidate diagnosis. |
| 9 | | Red ST(M) LED is ON. | SI unit has failed. | Stop the operation and contact SMC. |
| | | Red/green ST(M) LED is flashing alternately. | Connection between the units is defective. | Confirm that there is no loose connection between the units and connect them correctly. |
| 10 | | Red PWR LED is ON. (When diagnosis is activated) | Power supply voltage for control and input is abnormal. | Supply 24 VDC \pm 10% for control and input power source. |
| | | Red PWR(V) LED is ON. (When diagnosis is activated) | Power supply voltage for output is abnormal. | Supply 24 VDC +10/-5% for output power source. |

*: Refer to "System diagnosis information" (page 65) for details.

| No. | Problem | Presumed cause | Troubleshooting |
|----------------|--|---|---|
| 11 | SF: Red LED is ON BF: OFF (When diagnosis is activated) | Diagnosis error (Among PLC and each unit) | Check the LED display of each unit, and take countermeasures referring to failure No.2 to7. |
| | SF: OFF BF: Red LED is ON | PROFIBUS communication is abnormal. | Check the proper wiring length for the communication speed. Check if it has terminating resistors on both ends of the network. Keep the communication line away from noise sources. Connect wires based on PROFIBUS DP specifications. |
| | SF: Red LED is ON BF: Red LED is ON | Address setting is defective. | If the SI unit address is set to "0" or "126" or more, set it to between "1" and "125". |
| | SF: Red LED is ON BF: Red LED is flashing | Configuration does not match. | Check the configuration setting of PLC, and ensure it matches the actual configuration. |
| | SF: OFF BF: Red LED is flashing | Address setting is defective. | If the SI unit address is different from the PLC setting address, set the correct address which matches with the PLC setting address. |
| 12 | Abnormal valve operation | The number of connected valves is larger than the number of occupied valve outputs. | When the number of occupied valves of the V_SEL switch is smaller than the number of connected valves, set the switch so that the number of occupied valves is not smaller than the number of valves to be used. |
| | | Abnormality with program, etc. | Check if the ladder program of PLC, etc. is correct. |
| | | Abnormal power supply for output. | Check if the green Power LED of the SI unit is ON. If the LED is OFF, or the red LED is on, supply 24 VDC +10/-5% to the power supply for output. |
| | | Polarity of output does not match. | Check the connectors between the SI unit and manifold valve are not damaged, such as bent pins, and connect them correctly. |
| | | Output configuration of the SI unit does not match. | IF the polarity of the SI unit and the valve are different, replace one of them to make the combination match. •EX600-SPR1A (PNP output) ⇒ -COM. type valve •EX600-SPR2A (NPN output) ⇒ +COM. type valve |
| | | SI unit has failed. | Replace the SI unit with a normal one, and check the operation. |
| Valve failure. | Replace the valve with a normal one, and check the operation. Or refer to the troubleshooting of the valve used. | | |

| No. | Problem | Presumed cause | Troubleshooting |
|-----|--|---|---|
| 13 | Abnormal digital input device operation | Polarity of input does not match. | If the polarity (PNP, NPN) of the input unit and the input device are different, replace one of them to make the combination match. |
| | | Power supply for control and input is abnormal. | Check if the green Power LED of the SI unit is on. If the LED is OFF, or the red LED is on, supply 24 VDC $\pm 10\%$ to the power supply for control and input. |
| | | Wiring or connection is defective. | Connect the wiring correctly between the digital input device and the digital input unit. |
| | | Input unit has failed. | Replace the input unit with a normal one, and check the operation. |
| | | Input device failure. | Replace the input device with a normal one, and check the operation. Or refer to the troubleshooting of the input device used. |
| | Abnormal digital output device operation | Polarity of output does not match. | If the polarity (PNP, NPN) of the output unit and the output device are different, replace one of them to make the combination match. |
| | | Power supply for output is abnormal. | Check if the green Power LED of the SI unit is on. If the LED is OFF, or the red LED is on, supply 24 VDC $+10/-5\%$ to the power supply for output. |
| | | Wiring or connection is defective. | Connect the wiring correctly between the digital output device and the digital output unit. |
| | | Output unit has failed. | Replace the Output unit with a normal one, and check the operation. |
| | | Output device failure. | Replace the output device with a normal one, and check the operation. Or refer to the troubleshooting of the output device used. |
| | | Program etc. is defective. | Check whether the ladder program etc. of PLC are correct. |

| No. | Problem | Presumed cause | Troubleshooting |
|-----|---|---|---|
| 14 | Abnormal analog input device operation | Power supply for control and input is abnormal. | Check if the green Power LED of the SI unit is ON. If the LED is OFF, or the red LED is ON, supply 24 VDC $\pm 10\%$ to the power supply for control and input. |
| | | Analog input signal range setting failure. | Check the analog input device specification, and set the input signal range which satisfies the specification. |
| | | Analog data format does not match. | Check whether the data format of the analog input unit is properly set. |
| | | Wiring or connection is defective. | Connect the wiring correctly between the analog input device and the analog input unit. |
| | | Analog input unit has failed. | Replace the analog input unit with a normal one, and check the operation. |
| | | Analog input device failure. | Replace the analog input device with a normal one, and check the operation. Or refer to the troubleshooting of the analog input device used. |
| | Abnormal analog output device operation | Power supply for output is abnormal. | Check if the green Power LED of the SI unit is ON. If the LED is OFF, or the red LED is ON, supply 24 VDC $+10/-5\%$ to the power supply for output. |
| | | Analog output signal range setting failure. | Check the analog output device specification, and set the output signal range which satisfies the specification. |
| | | Analog data format does not match. | Check whether the data format of the analog output unit is properly set. |
| | | Wiring or connection is defective. | Connect the wiring correctly between the analog output device and the analog output unit. |
| | | Analog output unit has failed. | Replace the analog output unit with a normal one, and check the operation. |
| | | Analog output device failure. | Replace the analog output device with a normal one, and check the operation. Or refer to the troubleshooting of the analog output device used. |
| | | Program etc. is defective. | Check whether the ladder program etc. of PLC are correct. |

Parameter Setting

The product has parameters that can be set for the system, each unit or each channel.
 The parameters can be changed using the PLC and H.T.
 There is no order of precedence of the PLC and H.T. The latest parameter settings are used.

●Precautions for handling

- Changing parameters with the H.T. does not change the parameter settings in the PLC.
- If PROFIBUS communication is cut after changing parameters with the H.T. and the communication is connected again, the content of parameters will be changed to those set in the PLC.

■Parameter definition and setting

•System parameters

| No. | Parameter (H.T. Symbol) | Definition | Item | Content | Default setting | Parameter setting | |
|-----|--|---|---------------------------------------|--|--------------------|----------------------|------------|
| | | | | | | By PLC | By H.T. |
| 1 | Hold/Clear priority setting (Hold/Clear) | Switch the setting of the output during communication error or communication idling to follow the SI unit switch or the H.T. | Switch | Setting by SI unit switch becomes valid. OFF/Hold can be set all outputs. | ○ | ○ | ○ |
| | | | Handheld | Setting by the H.T. becomes valid. OFF/Hold/Forced ON can be set per channel. | | | |
| 2 | Diagnostic mode (Diag. mode) | Shifts the extension diagnosis information map. Refer to “Diagnostic” (page 62) for details. | No.diag. | Only the standard diagnosis is performed. | | ○ | × |
| | | | Device diag. | The standard and system diagnoses are performed. | | | |
| | | | Device + Module diag. | The standard, system and unit diagnoses are performed. | | | |
| | | | Device + Module + Channel diag. | The standard, system, unit and channel diagnoses are performed. | ○ | | |

•SI unit parameters

| No. | Parameter (H.T. Symbol) | Definition | Item | Content | Default setting | Parameter setting | |
|-----|---|--|---------|--|--------------------|----------------------|------------|
| | | | | | | By PLC | By H.T. |
| 1 | Power supply for control and input voltage monitor (PWRC_Mon) | Generated error per unit when control and input power supply voltage goes over approx. 26V or under 21V. | Enable | Generates an error. | ○ | ○ | ○ |
| | | | Disable | Does not generate an error. | | | |
| 2 | Power supply for output voltage monitor (PWRO_Mon) | Generated error per unit when output power supply voltage goes over approx. 26V or under 20 V. | Enable | Generates an error. | ○ | ○ | ○ |
| | | | Disable | Does not generate an error. | | | |
| 3 | Short Circuit Detection (SC_MonOp) | Generates error per unit when the short circuit of the valve is detected. | Enable | Generates an error. | ○ | ○ | ○ |
| | | | Disable | Does not generate an error. | | | |
| 4 | Restart after short circuit (SC_RstOp) | Restore the setting of short circuit detection error per unit after the valve short circuit is cleared. | Auto | Error is automatically cleared when the short circuit is fixed. | ○ | ○ | ○ |
| | | | Manual | Even when the short circuit is fixed, error is not cleared until the power is supplied again. | | | |
| 5 | Open Circuit Detection (OC_Mon) | Generates error per channel when the disconnection of the valve is detected. | Enable | Generates an error. | | × | ○ |
| | | | Disable | Not generated an error. | ○ | | |
| 6 | Output setting during communication fault *1 (Fault_MD) | Sets output per channel when communication is abnormal. | Clear | Turn off the output. | ○ | × | ○ |
| | | | Hold | Hold the output. | | | |
| | | | ForceON | Turn on the output forcefully. | | | |
| 7 | Output setting during communication idling *1 (Idle_MD) | Sets output per channel during communication idling. | Clear | Turn off the output. | ○ | × | ○ |
| | | | Hold | Hold the output. | | | |
| | | | ForceON | Turn on the output forcefully. | | | |

| No. | Parameter (H.T. Symbol) | Definition | Item | Content | Default setting | Parameter setting | |
|-----|---|--|---------|---|--------------------|----------------------|------------|
| | | | | | | By PLC | By H.T. |
| 8 | Valve ON/OFF counter (Counter) | Memorizes the number of times the valve is ON. Generates error per channel when the operation count exceeds the set value. *2 | Enable | Generates an error. Val: 1 to 65000 *3 | | × | ○ |
| | | | Disable | Does not generate an error. | ○ | | |

*1: This function is valid only when "Hold/Clear priority" of the system parameter is set to "Handheld".

*2: The count is memorized every 30 seconds per channel. When the power supply is turned on again, counting starts from the last value memorized.

*3: Times for setting is set value x1000 times.

•Digital input unit parameters

| No. | Parameter (H.T. Symbol) | Definition | Item | Content | Default setting | Parameter setting | |
|-----|---|--|---------|--|--------------------|----------------------|------------|
| | | | | | | By PLC | By H.T. |
| 1 | The power supply short circuit detection for control and input (SC_MonSs) | Generates error per unit when the short circuit of the power supply for the input device is detected. | Enable | Generates an error. | ○ | ○ | ○ |
| | | | Disable | Does not generate an error. | | | |
| 2 | Open circuit detection *1 (OC_Mon) | Generates error per channel when the disconnection of the input device is detected. *2 | Enable | Generates an error. | | × | ○ |
| | | | Disable | Does not generate an error. | ○ | | |
| 3 | Inrush current filter (Inrush) | Ignores excess current per unit for 100 msec after inrush. | Enable | Ignores excess current. | | ○ | ○ |
| | | | Disable | Does not ignore excess current. | ○ | | |
| 4 | Input filtering time (Filter_T) | Sets the time to ignore the input signal change per unit. | 0.1 ms | Selects the time for filtering. | 1.0 ms | ○ | ○ |
| | | | 1.0 ms | | | | |
| | | | 10 ms | | | | |
| | | | 20 ms | | | | |
| 5 | Input extension time (SigExt_T) | Sets the time to hold the input signal per unit. | 1.0ms | Selects the time to hold the input signal. | 15 ms | ○ | ○ |
| | | | 15 ms | | | | |
| | | | 100 ms | | | | |
| | | | 200 ms | | | | |
| 6 | Channel ON/OFF counter (Counter) | Memorizes the number of times the input device is ON. Generates error per channel when the operation count exceeds the set value. *3 | Enable | Generates an error. Val: 1 to 65000 *4 | | × | ○ |
| | | | Disable | Does not generate an error. | ○ | | |

*1: Disconnection detection is a function only available for digital unit (EX600-DXPC1, EX600-DXNC1) with disconnection detection.

*2: 2-wire type input device cannot be correctly detected if its leakage current is 0.5 mA or less while the equipment is in the OFF state (reed sensor, etc.). Ensure that all input device used has a leakage current above 0.5 mA in the OFF state.

3-wire type input device cannot be correctly detected if its current consumption is 0.5mA or less. The open circuit of input signals cannot be detected.

*3: The count is memorized every hour. When the power supply is turned on again, counting starts from the last value memorized.

*4: Times for setting is set value x1000 times.

•Digital output unit parameters

| No. | Parameter (H.T. Symbol) | Definition | Item | Content | Default setting | Parameter setting | |
|-----|--|--|---------|--|--------------------|----------------------|------------|
| | | | | | | By PLC | By H.T. |
| 1 | Output load short circuit detection (SC_MonOp) | Generates error per unit when the short circuit of the output device is detected. *1 | Enable | Generates an error. | ○ | ○ | ○ |
| | | | Disable | Does not generate an error. | | | |
| 2 | Restart after output load short circuit (SC_RstOp) | Restore the setting of short circuit detection error per unit after the output device short circuit is cleared. | Auto | Error is automatically cleared when the short circuit is fixed. | ○ | ○ | ○ |
| | | | Manual | Even when the short circuit is fixed, error is not cleared until the power is supplied again. | | | |
| 3 | Open circuit detection (OC_Mon) | Generates error per channel when the disconnection of the output device is detected. | Enable | Generates an error. | | × | ○ |
| | | | Disable | Does not generate an error. | ○ | | |
| 4 | Output setting during communicatio n fault *2 (Fault_MD) | Sets output per channel when communication is abnormal. | Clear | Turn off the output. | ○ | × | ○ |
| | | | Hold | Hold the output. | | | |
| | | | ForceON | Turn on the output forcefully. | | | |
| 5 | Output setting during communication idling *2 (Idle_MD) | Sets output per channel during communication idling. | Clear | Turn off the output. | ○ | × | ○ |
| | | | Hold | Hold the output. | | | |
| | | | ForceON | Turn on the output forcefully. | | | |
| 6 | Output ON/OFF counter (Counter) | Memorizes the number of times the output device is ON. Generates error per channel when the operation count exceeds the set value. *3 | Enable | Generates an error. Val: 1 to 65000 *4 | | × | ○ |
| | | | Disable | Does not generate an error. | ○ | | |

*1: Could be incorrectly recognized as short circuit depending on used load (ex.: lamp load). If detection is incorrect, disable the parameter setting.

*2: This function is valid only when "Hold/Clear priority" of the system parameter is set to "Handheld".

*3: The count is memorized every hour. When the power supply is turned on again, counting starts from the last value memorized.

*4: Times for setting is set value x1000 times.

•Digital I/O unit parameters

| No. | Parameter (H.T. Symbol) | Definition | Item | Content | Default setting | Parameter setting | |
|-----|---|---|---------|---|--------------------|----------------------|------------|
| | | | | | | By PLC | By H.T. |
| 1 | The power supply short circuit detection for control and input (SC_MonSs) | Generates error per unit when the short circuit of the control or input power supply is detected. | Enable | Generates an error. | ○ | ○ | ○ |
| | | | Disable | Does not generate an error. | | | |
| 2 | Inrush current filter (Inrush) | Ignores excess current per unit for 100 msec. after inrush. | Enable | Ignores excess current. | | ○ | ○ |
| | | | Disable | Does not ignore excess current | ○ | | |
| 3 | Input filtering time (Filter_T) | Sets the time to ignore the input signal change per unit | 0.1 ms | Selects the time for filtering. | 1.0 ms | ○ | ○ |
| | | | 1.0 ms | | | | |
| | | | 10 ms | | | | |
| | | | 20 ms | | | | |
| 4 | Input extension time (SigExt_T) | Sets the time to hold the input signal per unit. | 1.0 ms | Selects the time to hold the input signal. | 15 ms | ○ | ○ |
| | | | 15 ms | | | | |
| | | | 100 ms | | | | |
| | | | 200 ms | | | | |
| 5 | Output load short circuit detection (SC_MonOp) | Generates error per unit when the short circuit of the output device is detected. *1 | Enable | Generates an error. | ○ | ○ | ○ |
| | | | Disable | Does not generate an error. | | | |
| 6 | Restart after output load short circuit (SC_RstOp) | Restore the setting of short circuit detection error per unit after the output device short circuit is cleared. | Auto | Error is automatically cleared when the short circuit is fixed. | ○ | ○ | ○ |
| | | | Manual | Even when the short circuit is fixed, error is not cleared until the power is supplied again. | | | |
| 7 | Open circuit detection (OC_Mon) | Generates error per channel when the disconnection of the output device is detected. | Enable | Generates an error. | | × | ○ |
| | | | Disable | Does not generate an error. | ○ | | |
| 8 | Output setting during communication fault *2 (Fault_MD) | Sets output per channel when communication is abnormal. | Clear | Turn off the output. | ○ | × | ○ |
| | | | Hold | Hold the output. | | | |
| | | | ForceON | Turn on the output forcefully. | | | |
| 9 | Output setting for communication idling *2 (Idle_MD) | Sets the output per channel during communication idling. | Clear | Turn off the output. | ○ | × | ○ |
| | | | Hold | Hold the output. | | | |
| | | | ForceON | Turn on the output forcefully. | | | |

| No. | Parameter (H.T. Symbol) | Definition | Item | Content | Default setting | Parameter setting | |
|-----|--|--|---------|---|--------------------|----------------------|------------|
| | | | | | | By PLC | By H.T. |
| 10 | Input or output ON/OFF counter (Counter) | Memorizes the number of times the input or output device is ON. Generates error per channel when the operation count exceeds the set value. *3 | Enable | Generates an error. Val: 1 to 65000 *4 | | × | ○ |
| | | | Disable | Does not generate an error. | ○ | | |

*1: Could be incorrectly recognized as short circuit depending on used load (ex.: lamp load). If detection is incorrect, disable the parameter setting.

*2: This function is valid only when "Hold/Clear priority" of the system parameter is set to Handheld.

*3: The count is memorized every hour. When the power supply is turned on again, counting starts from the last value memorized.

*4: Times for setting is set value x1000 times.

•Analog input unit parameters

| No. | Parameter (H.T. Symbol) | Definition | Item | Content | Default setting | Parameter setting | |
|----------|--|---|------------------|---------------------------------|-----------------|-------------------|---------|
| | | | | | | By PLC | By H.T. |
| 1 | The power supply short circuit detection for the input device (SC_MonSs) | Generates error per unit when the short circuit of the power supply for the input device is detected. | Enable | Generates an error. | ○ | ○ | ○ |
| | | | Disable | Does not generate an error. | | | |
| 2 | Analog input range (Range) | Sets the analog input device range per channel. | -10..10 V | Selects the analog input range. | -10..10 V | ○ | ○ |
| | | | -5..5 V | | | | |
| | | | -20..20 mA | | | | |
| | | | 0..10 V | | | | |
| | | | 0..5 V | | | | |
| | | | 1..5 V | | | | |
| | | | 0..20 mA | | | | |
| 4..20 mA | | | | | | | |
| 3 | Analog data format (D_Format) | Sets analog data type which is output to PLC per unit. | Offset binary | Offset binary. | ○ | ○ | ○ |
| | | | Sign & Magnitude | Signed binary. | | | |
| | | | 2S Complement | 2's complement. | | | |
| 4 | Analog average filter (Filter) | Sets analog filtering time per channel. Sampling interval is approx. 2 sec. | None | None | | ○ | ○ |
| | | | 2AVG | 2 value average | ○ | | |
| | | | 4AVG | 4 value average | | | |
| | | | 8AVG | 8 value average | | | |
| 5 | Over range detection (Over_Rng) | Generates error per unit when the input value exceeds 0.5% of full span. | Enable | Generates an error. | ○ | ○ | ○ |
| | | | Disable | Does not generate an error. | | | |
| 6 | Under range detection (Undr_Rng) | Generates error per unit when the input value falls below 0.5% of full span. | Enable | Generates an error. | ○ | ○ | ○ |
| | | | Disable | Does not generate an error. | | | |
| 7 | User setting value upper limit error (Upr_Lmt) | Generates error per unit when the input value exceeds the set value. | Enable | Generates an error. *1 | | ○ | ○ |
| | | | Disable | Does not generate an error. | ○ | | |
| 8 | User setting value lower limit error (Lwr_Lmt) | Generates error per channel when the input value falls below the set value. | Enable | Generates an error. *1 | | ○ | ○ |
| | | | Disable | Does not generate an error. | ○ | | |

*1: Set value shall be set per analog input range within settable range in the table below. When the analog input range is changed, check the set value and change it to an appropriate value.

| Analog input measurement range. (Range) | Upper and lower setting limit of user setting. | |
|--|--|---------------------|
| | (Lwr_Lmt) | (Upr_Lmt) |
| -10..10 V | -10.50 to +10.45 V | -10.45 to +10.50 V |
| -5..5 V | - 5.25 to + 5.22 V | - 5.22 to +5.25 V |
| -20..20 mA | -21.00 to +20.90 mA | -20.90 to +21.00 mA |
| 0..10 V | 0.00 to +10.45 V | +0.05 to +10.50 V |
| 0..5 V | 0.00 to +5.22 V | +0.03 to +5.25 V |
| 1..5 V | +0.75 to +5.22 V | +0.78 to +5.25 V |
| 0..20 mA | 0.00 to +20.90 mA | +0.10 to +21.00 mA |
| 4..20 mA | +3.00 to +20.90 mA | +3.10 to +21.00 mA |

•Analog output unit parameters (1)

| No. | Parameter (H.T. Symbol) | Definition | Item | Content | Default setting | Parameter setting | |
|-----|---|--|------------------|--|--------------------|----------------------|------------|
| | | | | | | By PLC | By H.T. |
| 1 | The power supply short circuit detection for the output device (SC_MonSs) | Generates error per unit when the short circuit of the output device is detected. | Enable | Generates an error. | ○ | ○ | ○ |
| | | | Disable | Does not generate an error. | | | |
| 2 | Analog output range (Range) | Sets the range of the analog output device per channel. | 0..10 V | Selects the analog output range. | 0..10 V | ○ | ○ |
| | | | 0..5 V | | | | |
| | | | 1..5 V | | | | |
| | | | 0..20 mA | | | | |
| 3 | Analog data format (D_Format) | Sets analog data type which is output to PLC per unit. | Offset binary | Offset binary. | ○ | ○ | ○ |
| | | | Sign & Magnitude | Signed binary. | | | |
| | | | 2S Complement | 2's complement. | | | |
| | | | Scaled | Scale conversion type. | | | |
| 4 | User setting value upper limit error (Upr_Lmt) | Generates error per channel when the output value exceeds the set value. | Enable | Generates an error. *2 | | ○ | ○ |
| | Disable | Does not generate an error. | ○ | | | | |
| 4 | Scale upper limit setting *1 (UpLm/Scl) | Sets the scale upper limit. Generates error per channel when the output value exceeds the upper limit. | Enable | Generates an error. Val: -32766 to 32767 | | ○ | ○ |
| | | | Disable | Does not generate an error. Val: -32766 to 32767 | ○ Val: 1000 | | |
| 5 | User setting value lower limit error (Lwr_Lmt) | Generates error per channel when the output value falls below the set value. | Enable | Generates an error. *2 | | ○ | ○ |
| | Disable | Does not generate an error. | ○ | | | | |
| 5 | Scale lower limit setting *1 (LwLm/Scl) | Sets the scale lower limit. Generates error per channel when the output value falls below the lower limit. | Enable | Generates an error. Val: -32767 to 32766 | | ○ | ○ |
| | | | Disable | Does not generate an error. Val: -32767 to 32766 | ○ Val: 0 | | |
| 6 | Output setting for communication fault *3 (Fault_MA) | Sets output per channel when communication is abnormal. | Enable | Val is output. *2 | | ○ | ○ |
| | | | Disable | The output is held. | ○ | | |

•Analog output unit parameters (2)

| No. | Parameter (H.T. Symbol) | Definition | Item | Content | Default setting | Parameter setting | |
|-----|---|---|---------|------------------------------|--------------------|----------------------|------------|
| | | | | | | By PLC | By H.T. |
| 7 | Output setting for communication idling ^{*3} (Idle_MA) | Sets output per channel during communication idling. | Enable | Val is output. ^{*2} | | × | ○ |
| | | | Disable | The output is held. | ○ | | |

*1: When "Scaled" is selected as the analog data format, the display of H.T. is switched from Upr_Lmt to UpLm/Scl, from Lwr_Lmt to LwLm/Scl.

*2: Set value shall be set per analog input range within settable range in the table below. When the analog input range is changed, check the set value and change it to an appropriate value.

*3: This function is valid only when "Hold/Clear priority" of the system parameter is set to Handheld.

| Analog output measurement range. (Range) | Upper and lower setting limit of user setting. | | Settable range during communication fault or idling. (Fault_MA) (Idle_MA) |
|--|--|--------------------|---|
| | (Lwr_Lmt) | (Upr_Lmt) | |
| 0..10 V | 0.00 to +10.45 V | +0.05 to +10.50 V | 0.00 to +10.50 V |
| 0.5 V | 0.00 to + 5.22 V | +0.03 to +5.25 V | 0.00 to +5.25 V |
| 1..5 V | +0.75 to +5.22 V | +0.78 to +5.25 V | +0.75 to +5.25 V |
| 0..20 mA | 0.00 to +20.90 mA | +0.10 to +21.00 mA | 0.00 to +21.00 mA |
| 4..20 mA | +3.00 to +20.90 mA | +3.10 to +21.00 mA | +3.00 to +21.00 mA |

•Analog I/O unit parameters (1)

| No. | Parameter (H.T. Symbol) | Definition | Item | Content | Default setting | Parameter setting | |
|-----|--|---|------------------|---|--------------------|----------------------|------------|
| | | | | | | By PLC | By H.T. |
| 1 | The power supply short circuit detection for the input or output device (SC_MonSs) | Generates error per unit when the short circuit of the input device power supply or output device is detected. | Enable | Generates an error. | ○ | ○ | ○ |
| | | | Disable | Does not generate an error. | | | |
| 2 | Analog input or output range (Range) | Sets the analog input or output device range per channel. | 0..10 V | Selects the analog input or output range. | 1.5 V | ○ | ○ |
| | | | 0..5 V | | | | |
| | | | 1..5 V | | | | |
| | | | 0..20 mA | | | | |
| | | | 4..20 mA | | | | |
| 3 | Analog data format (D_Format) | Sets analog data type which is output to PLC per unit. | Offset binary | Offset binary. | ○ | ○ | ○ |
| | | | Sign & Magnitude | Signed binary. | | | |
| | | | 2S Complement | 2's complement. | | | |
| | | | Scaled | Scale conversion type. | | | |
| 4 | Analog average filter (Filter) | Sets analog filtering time per channel. Sampling interval is approx. 2 sec. | None | None. | ○ | ○ | ○ |
| | | | 2AVG | 2 value average. | | | |
| | | | 4AVG | 4 value average. | | | |
| | | | 8AVG | 8 value average. | | | |
| 5 | Over range detection (Over_Rng) | Generates error per unit when the input value exceeds 0.5% of full span. | Enable | Generates an error. | | ○ | ○ |
| | | | Disable | Does not generate an error. | ○ | | |
| 6 | Under range detection (Undr_Rng) | Generates error per unit when the input value falls below 0.5% of full span. | Enable | Generates an error. | | ○ | ○ |
| | | | Disable | Does not generate an error. | ○ | | |
| 7 | User's set value upper limit error (Upr_Lmt) | Generates error per channel when the input or output value exceeds the set value. | Enable | Generates an error. *2 | ○ | × | ○ |
| | | | Disable | Does not generate an error. | | | |
| | Scale upper limit setting *1 (UpLm/Scl) | Sets the scale upper limit. Generates error per channel when the input or output value exceeds the upper limit. | Enable | Generates an error. Val: -32766 to 32767 | ○ Val: 1000 | | |
| | | | Disable | Does not generated an error. Val: -32766 to 32767 | | | |

•Analog I/O unit parameters (2)

| No. | Parameter (H.T. Symbol) | Definition | Item | Content | Default setting | Parameter setting | |
|-----|--|---|---------|--|-----------------|-------------------|---------|
| | | | | | | By PLC | By H.T. |
| 8 | User's set value lower limit error (Lwr_Lmt) | Generates error per channel when the input or output value falls below the set value. | Enable | Generates an error. *2 | | × | ○ |
| | | | Disable | Does not generate an error. | ○ | | |
| | Scale lower limit setting *1 (UpLm/ScI) | Sets the scale lower limit. Generates error per channel when the input or output value falls below the lower limit. | Enable | Generates an error. Val: -32767 to 32766 | | | |
| | | | Disable | Does not generate an error. Val: -32767 to 32766 | ○ Val: 0 | | |
| 9 | Output setting for communication fault *3 (Fault_MA) | Sets output per channel when communication is abnormal. | Enable | Val is output. *2 | | × | ○ |
| | | | Disable | The output is held. | ○ | | |
| 10 | Output setting for communication idling *3 (Idle_MA) | Sets output per channel during communication idling. | Enable | Val is output. *2 | | × | ○ |
| | | | Disable | The output is held. | ○ | | |

*1: When "Scaled" is selected as the analog data format, the display of H.T. is switched from Upr_Lmt to UpLm/ScI, from Lwr_Lmt to LwLm/ScI.

*2: Set value shall be set per analog output range within settable range in the table below. When the analog output range is changed, check the set value and change it to an appropriate value.

*3: This function is valid only when "Hold/Clear priority" of the system parameter is set to Handheld.

| Analog Input or output measurement range. (Range) | Upper and lower setting limit of user setting. | | Settable range during communication error or idling. (Fault_MA) (Idle_MA) |
|---|--|--------------------|---|
| | (Lwr_Lmt) | (Upr_Lmt) | |
| 0..10 V | 0.00 to +10.45 V | +0.05 to +10.50 V | 0.00 to +10.50 V |
| 0..5 V | 0.00 to +5.22 V | +0.03 to +5.25 V | 0.00 to +5.25 V |
| 1..5 V | +0.75 to +5.22 V | +0.78 to +5.25 V | +0.75 to +5.25 V |
| 0..20 mA | 0.00 to +20.90 mA | +0.10 to +21.00 mA | 0.00 to +21.00 mA |
| 4..20 mA | +3.00 to +20.90 mA | +3.10 to +21.00 mA | +3.00 to +21.00 mA |

Hardware Configuration

■ GSD file and icon

GSD file is required to configure the EX600 with a DP Master. The GSD File contains ID number, version, and unit information. Furthermore, icons are necessary for the display icon of the EX600 on the DP Master Software. The GSD File and icon can be downloaded from the URL given below.

•URL: <http://www.smcworld.com>

Products Document → Instruction Manual → SMCB1411.zip

•Content of SMCB1411.zip

| | |
|----------|---------------------------------------|
| GSD File | SMCB1411.gsd |
| Icon | EX600_1N.bmp (standard type) |
| | EX600_1D.bmp (diagnostic type) |
| | EX600_1S.bmp (special operating mode) |

•GSD file version

The latest GSD file name is "SMCB1411.gsd".


There are some Units that cannot be configured by "SMCA1411.gsd".

| | | GSD file | GSD file name | |
|----------------|---------------------|-------------------|---------------|--------------|
| | | | SMCA1411.gsd | SMCB1411.gsd |
| Product number | SI Unit | EX600-SPR□ | ○ | ○ |
| | | EX600-SPR□A | ○ | ○ |
| | Digital input unit | EX600-DX□B/□C□/□D | ○ | ○ |
| | | EX600-DX□E/□F | × | ○ |
| | Disital output unit | EX600-DY□B | ○ | ○ |
| | | EX600-DY□E/□F | × | ○ |
| | Digital I/O unit | EX600-DM□E/□F | × | ○ |
| | Analog input unit | EX600-AXA | ○ | ○ |
| | Analog output unit | EX600-AYA | × | ○ |
| | Analog I/O unit | EX600-AMB | × | ○ |

■ Configuration layout

The Unit number is sequentially allotted from the End Plate end of the EX600 assembly. The communication with the DP Master will not be established if the layout of the hardware configuration does not match the actual system configuration.

•Example of unit number.

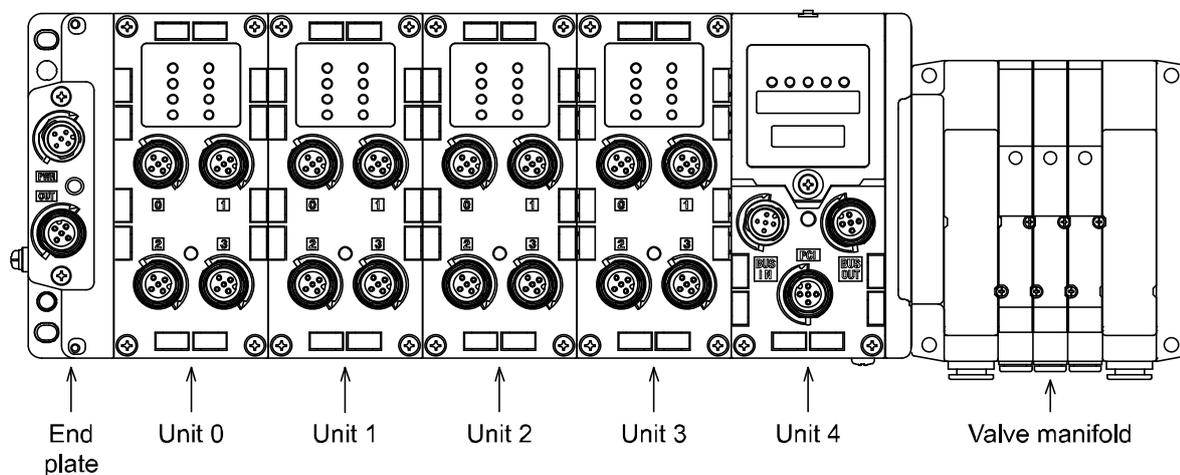

■ SIEMENS PLC S7™ connection method

Below is an explanation of the EX600 Series connection method with a SIEMENS' PLC STEP7™. Refer to the manual of STEP7™ for a detailed manner of operation.

•GSD File Installation

There are 2 methods for installing the EX600-SPR□ GSD file.


•Method1: Before starting-up STEP7™.

- (1)Copy GSD file to [.../Siemens/Step7/S7data/gsd] folder.
- (2)Copy icons to [.../Siemens/Step7/S7data/nsbmp] folder.

•Method 2: After STEP7™ has been started.


- (1)Open [HW Configuration] window.
- (2)Select [Option] → [Install New GSD...] From the menu bar.
- (3)Select GSD File (SMCB1411.gsd), and click the [Open] button.

After completing the above steps, the “EX600-SPR1/2” will automatically be added to the STEP7™ [PROFIBUS DP/Additional Field Devices/I/O] Folder on [Hardware Catalogue] window.

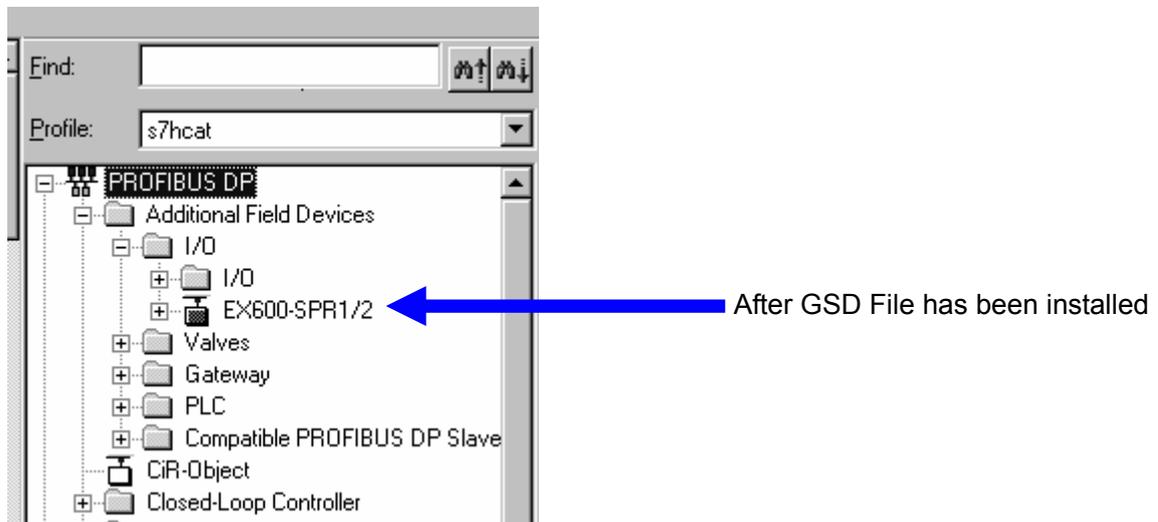


•Adding Stations

- (1) Drag and drop [EX600-SPR1/2] from [Hardware Catalogue] window to the line of [PROFIBUS: DP master system].
- (2)[Property-PROFIBUS Interface EX600-SPR1/2] window will be displayed.
- (3)Enter the unit address on the dialogue box. Please make sure that the address entered is the same as the address set, using the SI unit switches.

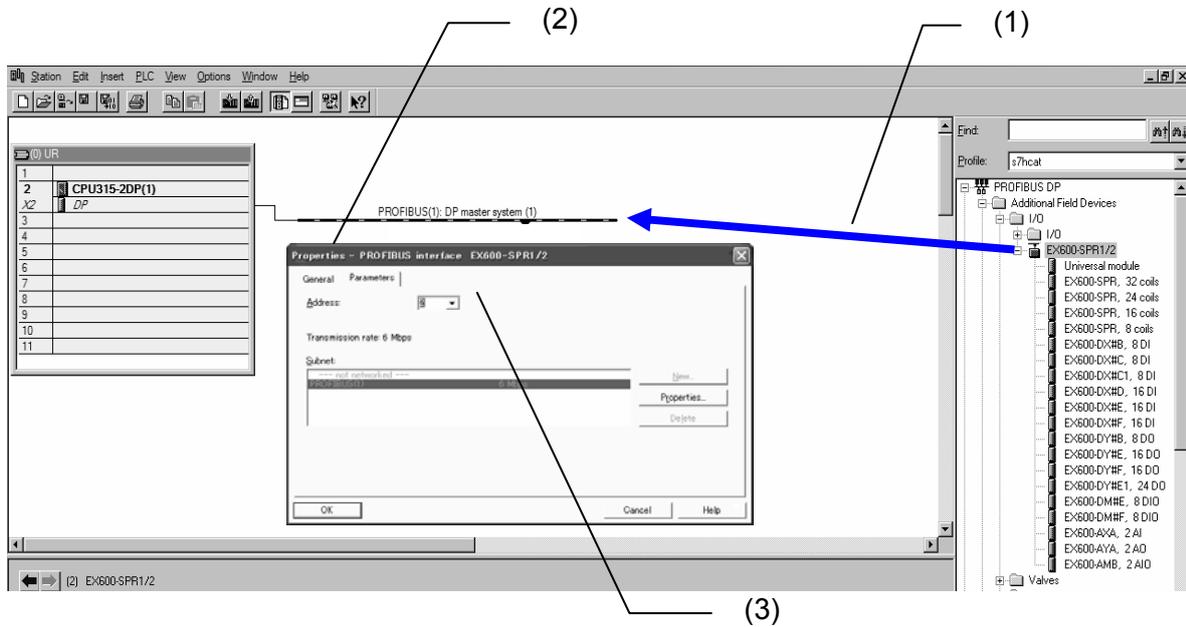


- (4)Press the [OK] button to confirm the address setting. Icon of [EX600-SPR1/2] will be shown on [station] window.

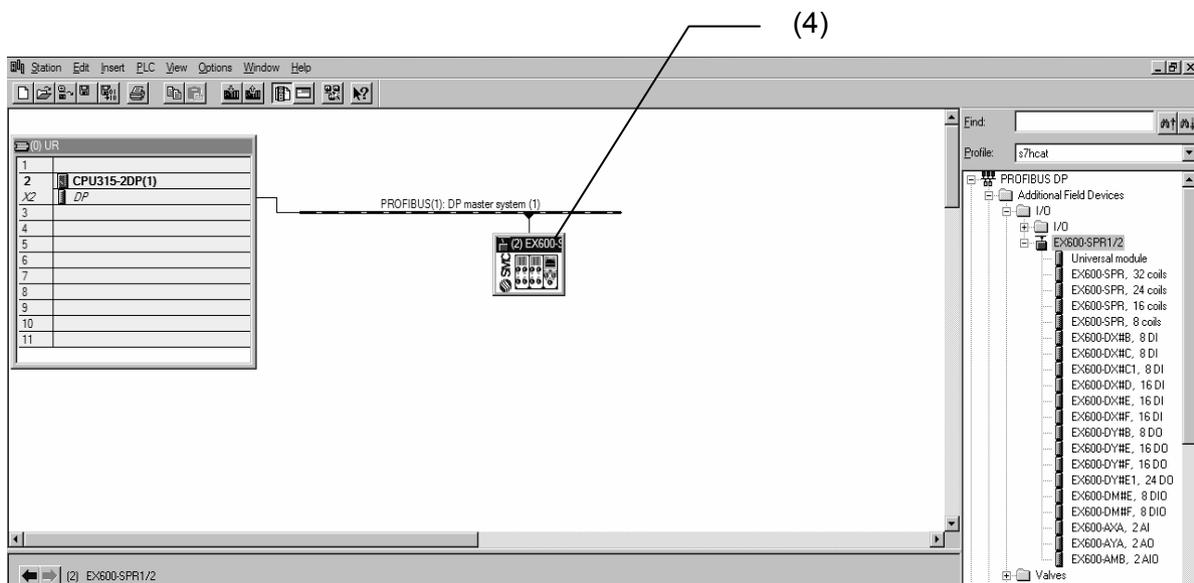

•Adding Units


- (1) Select [EX600-SPR1/2] from [station] window.
- (2) An empty slot for [EX600-SPR1/2] will be displayed on [Configuration table] window.
- (3) Drag and drop the connected unit from [Hardware Catalogue] window to slot 1. Please make sure to add the unit as the real system's order of connecting.
- (4) Add the other units, according to the connected order, to the [Configuration table] window, ending with the SI unit.
 - Unit number 0 = slot 1
 - Unit number 1 = slot 2
 - ⋮
 - Unit number 8 = slot 9
 - Unit number 9 = slot 10
- (5) The SI Unit for 32, 24, 16, 8 coils can be selected, please make sure to match the setting with the V_SEL switch setting in the SI unit.

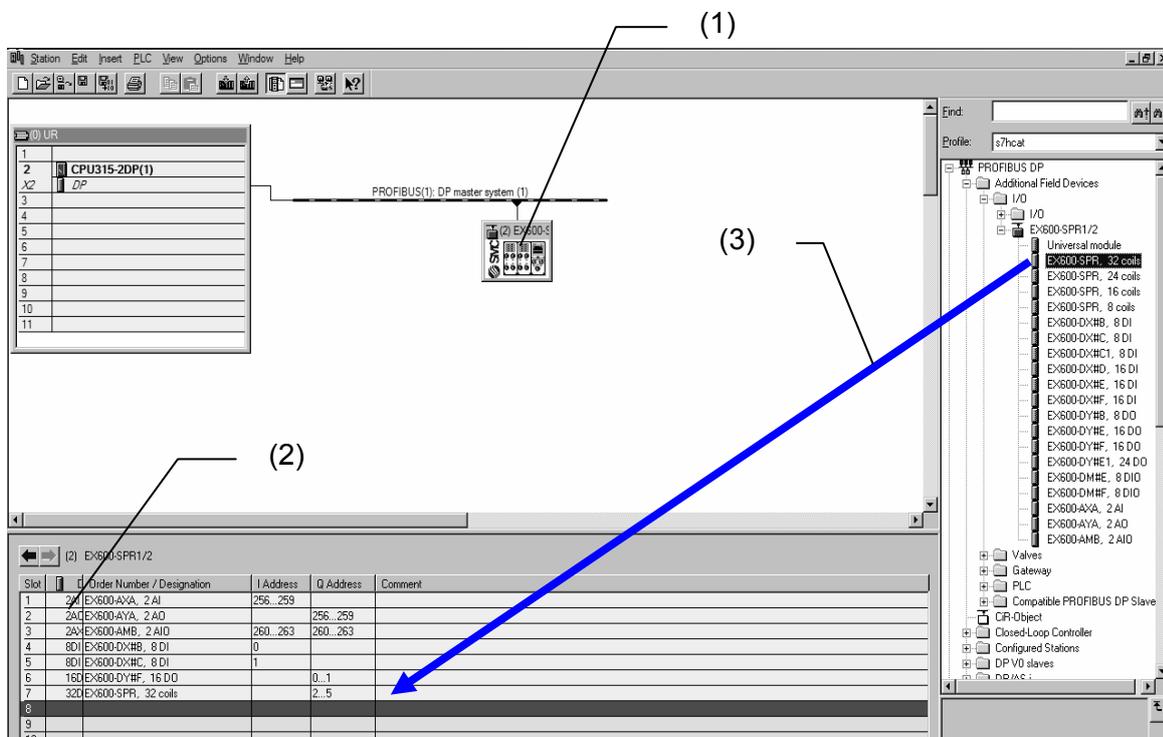

Parameter setting at PLC

System Parameter Setting

- (1) Double click the [EX600-SPR1/2] icon on the line of [PROFIBUS: DP master system]. [Properties – DP slave] window will be displayed.
- (2) Select the [Parameter Assignment] tab, the available Parameter setting list will be displayed.
- (3) Change the parameter value by clicking on the [Value] column of the selected parameter.
- (4) Press the [OK] Button, after the configuration data is downloaded to the PLC, the setting will be completed.


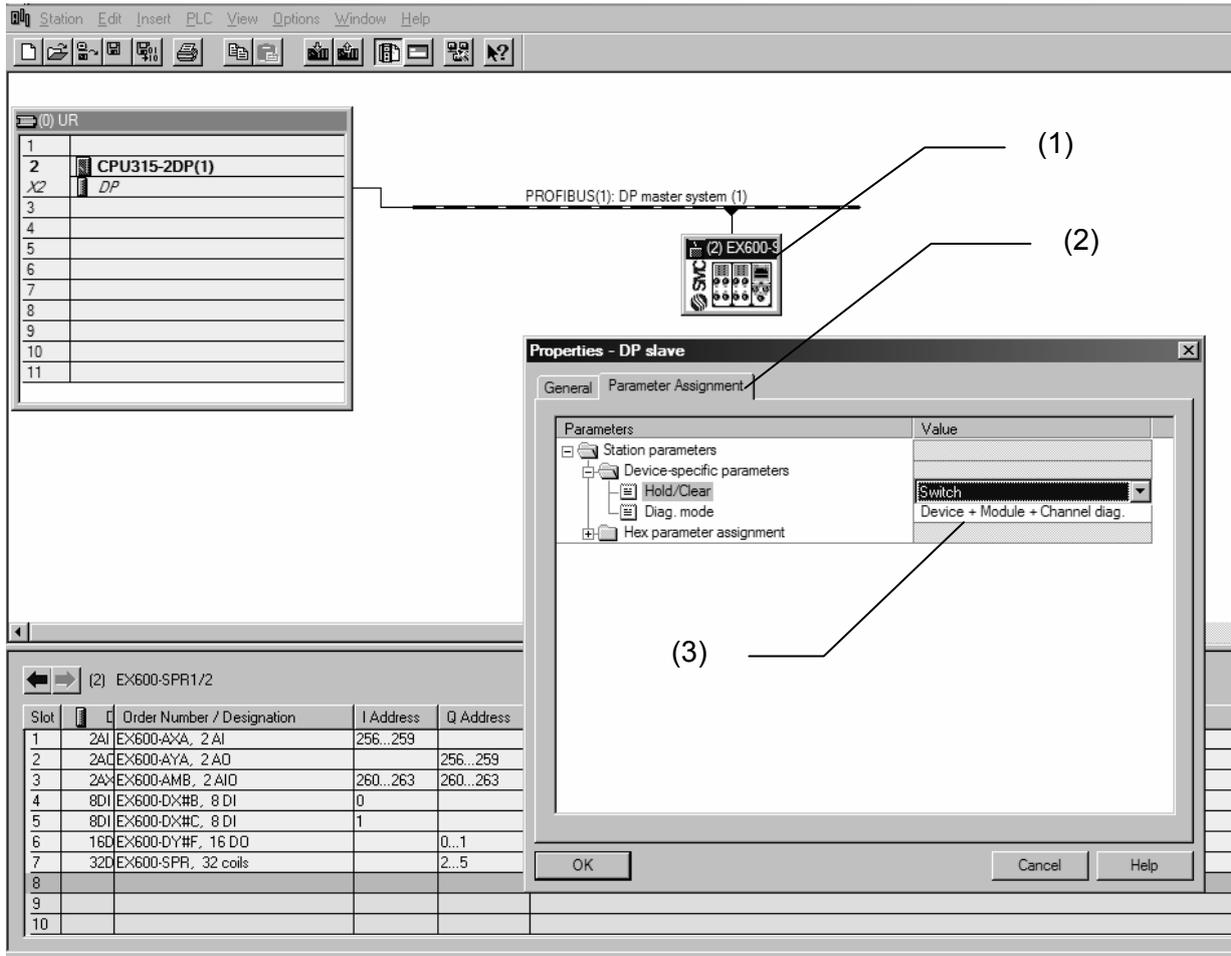


The system parameters given below can be set at the STEP7™.

| System parameter | Setting value |
|------------------|---------------------------------|
| Hold/Clear | Switch |
| | Handheld |
| Diag. mode | No diag. |
| | Device diag. |
| | Device + Module diag. |
| | Device + Module + Channel diag. |

•Unit Parameter Setting

- (1) Double click a unit that you want to set on the [Configuration table] window. [Properties – DP slave] window will be displayed.
- (2) Select the [Parameter Assignment] tab, the available Parameter setting list will be displayed.
- (3) Change the parameter value by clicking on the [Value] column of the selected parameter.
- (4) Press the [OK] Button, after the configuration data is downloaded to the PLC, the setting will be completed.

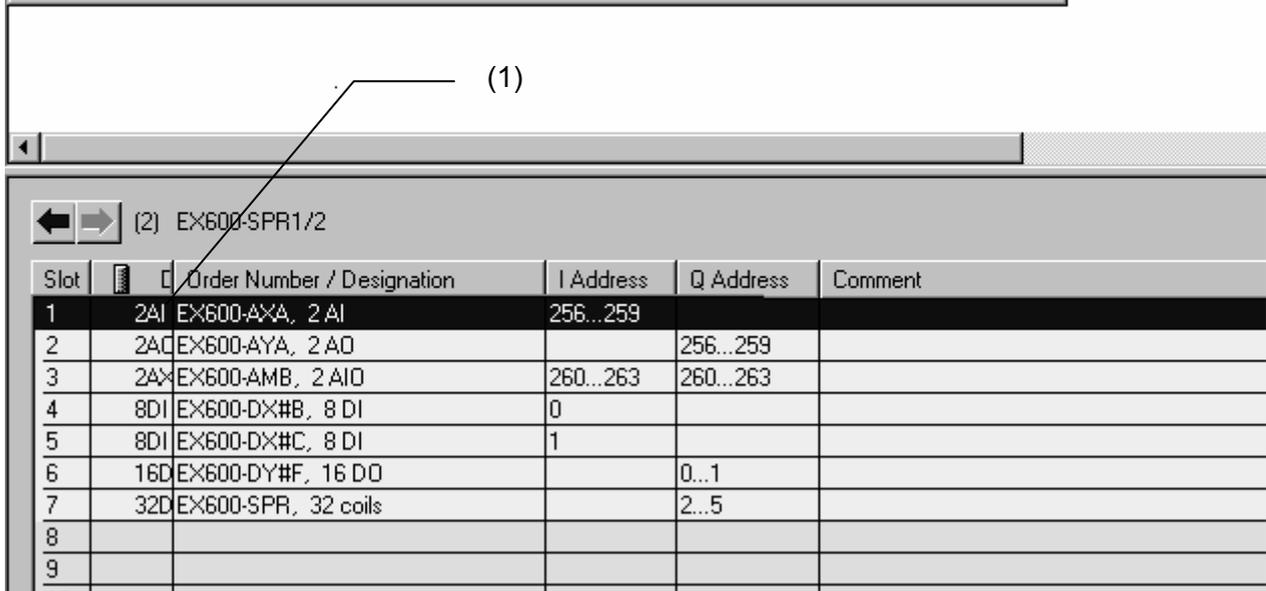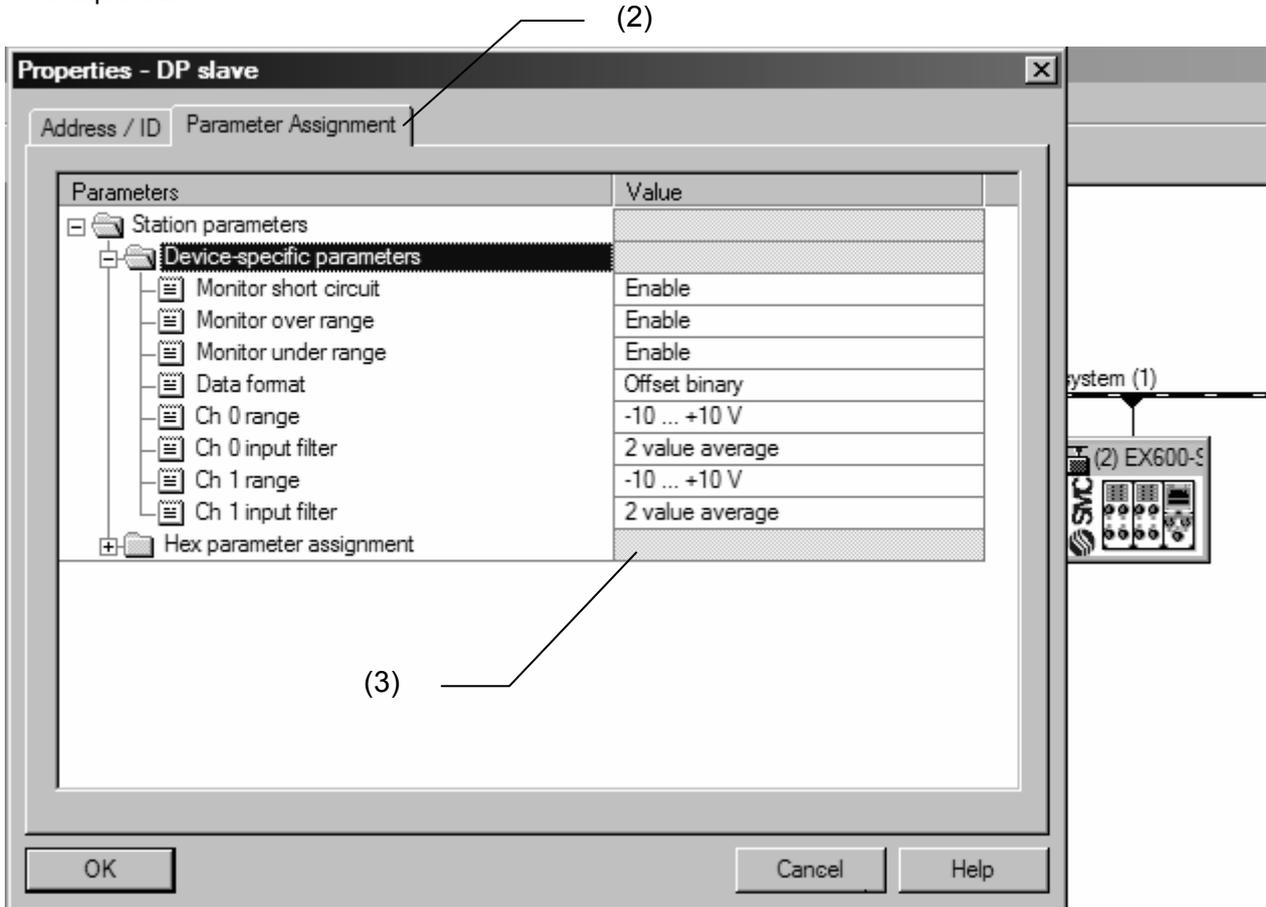

*: Screen data used on this document is taken from STEP7™ software by Siemens AG.

I/O Map


Each unit of the product has its own identification (ID) number.

| Unit | Unit part number | Occupied byte | | ID number | |
|---------------------|--|-------------------------|-------------------------|-----------|----------|
| | | Input | Output | Siemens | IEC61158 |
| SI unit | EX600-SPR□A (32 outputs) | 0 | 4 | 32DO | 23h |
| | EX600-SPR□A (24 outputs) | 0 | 3 | 24DO | 22h |
| | EX600-SPR□A (16 outputs) | 0 | 2 | 16DO | 21h |
| | EX600-SPR□A (8 outputs) | 0 | 1 | 8DO | 20h |
| Digital input unit | EX600-DX□B (8 inputs) | 1 | 0 | 8DI | 10h |
| | EX600-DX□C (8 inputs) | 1 | 0 | 8DI | 10h |
| | EX600-DX□C1 (8 inputs)(with open circuit detection) | 1 | 0 | 8DI | 10h |
| | EX600-DX□D (16 inputs) | 2 | 0 | 16DI | 11h |
| | EX600-DX□E (16 inputs) | 2 | 0 | 16DI | 11h |
| | EX600-DX□F (16 inputs) | 2 | 0 | 16DI | 11h |
| Digital output unit | EX600-DY□B (8 outputs) | 0 | 1 | 8DO | 20h |
| | EX600-DY□E (8 outputs) | 0 | 2 | 16DO | 21h |
| | EX600-DY□E1 (16 outputs) | 0 | 3 | 24DO | 22h |
| | EX600-DY□F (8 outputs) | 0 | 2 | 16DO | 21h |
| Digital I/O unit | EX600-DM□E (8 inputs/8 output) | 8 | 8 | 8DX | 30h |
| | EX600-DM□F (8 inputs/8 output) | 8 | 8 | 8DX | 30h |
| Analog input unit | EX600-AXA (2 channels) | 4 (2 byte/1 channel) | 0 | 2AI | 51h |
| Analog output unit | EX600-AYA (2 channels) | 0 | 4 (2 byte/1 channel) | 2AO | 61h |
| Analog I/O unit | EX600-AMB (2 channels) | 4 (2 byte/1 channel) | 4 (2 byte/1 channel) | 113 | 71h |

Diagnostic

The diagnosis mode is set by the system parameter “Diag. mode”. (Refer to “Setting and Adjustment” (page 20) for setting the switch.)

| No. | Diagnostic Mode | Content |
|-----|-----------------------------|---|
| 1 | No diag. | Outputs the standard diagnosis information. |
| 2 | Device diag. | Outputs the standard and system diagnosis information. |
| 3 | Device+Module diag. | Outputs the standard, system and unit diagnosis information. |
| 4 | Device+Module+Channel Diag. | Outputs the standard, system, unit and channel diagnosis information. |

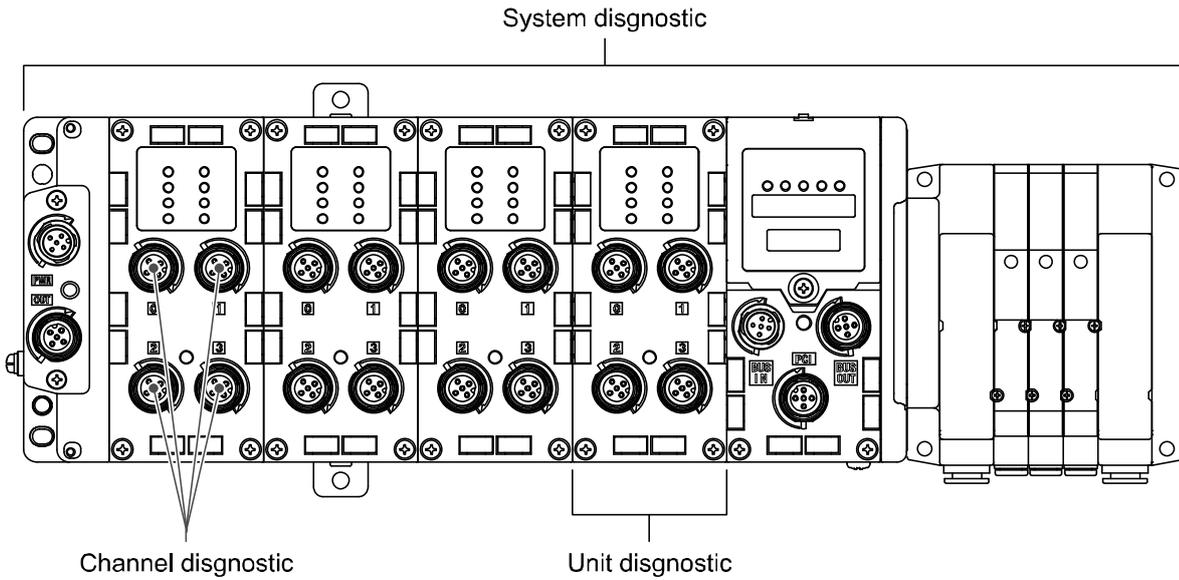

•Diagnosis map

| Byte No. | Content | Diagnostic type |
|----------|----------------------------|--------------------------|
| Byte 0 | Station status 1 | Standard diagnostic data |
| Byte 1 | Station status 2 | |
| Byte 2 | Station status 3 | |
| Byte 3 | Master PROFIBUS DP address | |
| Byte 4 | Manufacturer ID (MSB: 14h) | |
| Byte 5 | Manufacturer ID (LSB: 11h) | |
| Byte 6 | Header | System diagnostic data |
| Byte 7 | System diag.1 | |
| Byte 8 | System diag.2 | |
| Byte 9 | System diag.3 | |
| Byte 10 | System diag.4 | |
| Byte 11 | Reserved | |
| : | : | |
| Byte 18 | Reserved | |
| Byte 19 | Header | Unit diagnostic data |
| Byte 20 | Unit 0 to 7 | |
| Byte 21 | Unit 8 to 9 | |
| Byte 22 | Reserved | |
| : | : | |
| Byte 27 | Reserved | |
| Byte 28 | Unit A | Channel diagnostic data |
| Byte 29 | Channel A | |
| Byte 30 | Diagnostic contents A | |
| Byte 31 | Unit B | |
| Byte 32 | Channel B | |
| Byte 33 | Diagnostic contents B | |
| : | : | |
| Byte 61 | Unit L | |
| Byte 62 | Channel L | |
| Byte 63 | Diagnostic contents L | |

•Standard diagnostic data

•Station status 1

| | | | | | | | | |
|--------|---|---|---|---|---|---|---|---|
| | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
| Byte 0 | | | 0 | | | | | |

| Bit No. | Content |
|---------|--|
| 0 | 1: The slave cannot be accessed by the master. |
| 1 | 1: The slave is not ready to exchange data. |
| 2 | 1: The configuration data sent from the master to the slave is not consistent with the setting of the slave. |
| 3 | 1: The external diagnosis is available. |
| 4 | 1: The necessary function is not supported by the slave. |
| 5 | (This bit is fixed to 0.) |
| 6 | 1: The slave type is not covered by the configuration of the software. |
| 7 | 1: The parameter is assigned to the slave by a different master. |

•Station status 2

| | | | | | | | | |
|--------|---|---|---|---|---|---|---|---|
| | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
| Byte 1 | | 0 | | | | 1 | | |

| Bit No. | Content |
|---------|---|
| 0 | 1: The new parameter needs to be assigned to a slave. |
| 1 | 1: The new message has been issued. |
| 2 | (This bit is fixed to 1.) |
| 3 | 1: The response monitor is enabled to the slave. |
| 4 | 1: The slave has received the FREEZE control command. |
| 5 | 1: The slave has received the SYNC control command. |
| 6 | (This bit is fixed to 0.) |
| 7 | 1: The slave is disabled. |

•Station status 3

| | | | | | | | | |
|--------|---|---|---|---|---|---|---|---|
| | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
| Byte 2 | | 0 | 0 | 0 | 0 | 0 | 0 | 0 |

| Bit No. | Content |
|---------|---|
| 0 to 6 | (This bit is fixed to 0) |
| 7 | 1: The number of diagnosis messages has exceeded the capacity of the slave. |

•Master PROFIBUS Address

Byte 3 shows a PROFIBUS address of the master in which the parameter of the slave can be changed. When the address is FFh, the parameter of the slave cannot be changed.

•Slave ID

Byte 4 and 5 show a slave ID. The ID of EX600-SPR□A is 1411h.

•System diagnostic data

•Header

| | | | | | | | | |
|--------|---|---|---|---|---|---|---|---|
| | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
| Byte 6 | 0 | 0 | 0 | 0 | 1 | 1 | 0 | 1 |

| Bit No. | Content |
|---------|---|
| 0 to 7 | 0Eh: The number of bytes of the system diagnosis information (fixed to 13 bytes). |

•System diag.1

| | | | | | | | | |
|--------|---|---|---|---|---|---|---|---|
| | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
| Byte 7 | | | | | | | | |

| Bit No. | Content |
|---------|--|
| 0 | 1: The analog input or output value has fallen below the user's set value. |
| 1 | 1: The analog input or output value has exceeded the user's set value. |
| 2 | 1: The analog input value has fallen below the set range. |
| 3 | 1: The analog input value has exceeded the set range. |
| 4 | 1: The counter has exceeded the set value. |
| 5 | 1: The open circuit has been detected. |
| 6 | 1: The short circuit of the valve output or digital output has been detected. |
| 7 | 1: The short circuit of the power supply for the input device has been detected. |

•System diag.2

| | | | | | | | | |
|--------|---|---|---|---|---|---|---|---|
| | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
| Byte 8 | | | - | | | - | | |

| Bit No. | Content |
|---------|--|
| 0 | 1: The power supply for output device is outside of the specification. |
| 1 | 1: The power supply for control and input device is outside of the specification. |
| 2 | Reserved |
| 3 | 1: There is a connection failure between each unit (during operation). |
| 4 | 1: There is a connection failure between each unit (when the power supply is applied). |
| 5 | Reserved |
| 6 | 1: System error occurred. |
| 7 | 1: Hardware error occurred. |

•System diag.3

| | | | | | | | | |
|--------|---|---|---|---|---|---|---|---|
| | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
| Byte 9 | - | - | - | - | - | - | - | - |

| Bit No. | Content |
|---------|----------|
| 0 | Reserved |
| 1 | Reserved |
| 2 | Reserved |
| 3 | Reserved |
| 4 | Reserved |
| 5 | Reserved |
| 6 | Reserved |
| 7 | Reserved |

•System diag.4

| | | | | | | | | |
|---------|---|---|---|---|---|---|---|---|
| | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
| Byte 10 | - | - | - | | | | | |

| Bit No. | Content |
|---------|--|
| 0 | 1: There is an error in the digital input unit. |
| 1 | 1: There is an error in the digital output unit. |
| 2 | 1: There is an error in the analog input unit. |
| 3 | 1: There is an error in the analog output unit. |
| 4 | 1: There is an error in the SI unit. |
| 5 | Reserved |
| 6 | Reserved |
| 7 | Reserved |

•Unit standard diagnostic data

•Header

| | | | | | | | | |
|---------|---|---|---|---|---|---|---|---|
| | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
| Byte 19 | 0 | 1 | 0 | 0 | 1 | 0 | 0 | 1 |

| Bit No. | Content |
|---------|--|
| 0 to 5 | 09h: The number of bytes of the unit diagnosis information (fixed to 9 bytes). |
| 6 | (This bit is fixed to 1) |
| 7 | (This bit is fixed to 0) |

•Unit 0 to 7

| | | | | | | | | |
|---------|---|---|---|---|---|---|---|---|
| | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
| Byte 20 | | | | | | | | |

| Bit No. | Content |
|---------|---------------------------------|
| 0 | 1: There is an error in unit 0. |
| 1 | 1: There is an error in unit 1. |
| 2 | 1: There is an error in unit 2. |
| 3 | 1: There is an error in unit 3. |
| 4 | 1: There is an error in unit 4. |
| 5 | 1: There is an error in unit 5. |
| 6 | 1: There is an error in unit 6. |
| 7 | 1: There is an error in unit 7. |

•Unit 8 to 9

| | | | | | | | | |
|---------|---|---|---|---|---|---|---|---|
| | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 |
| Byte 21 | - | - | - | - | - | - | | |

| Bit No. | Content |
|---------|---------------------------------|
| 0 | 1: There is an error in unit 8. |
| 1 | 1: There is an error in unit 9. |
| 2 | Reserved |
| 3 | Reserved |
| 4 | Reserved |
| 5 | Reserved |
| 6 | Reserved |
| 7 | Reserved |

•Channel diagnostic data

The channel diagnosis information is 3 bytes, and handles a maximum of 12 errors.

However, each unit can output only 1 error, and will output the error with a smaller channel number when it multiple errors have been generated.

| | | | | | | | | | |
|---------|---|---|---|---|---|---|---|---|----------------|
| | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 | |
| Byte 28 | 1 | 0 | - | | | | | | Unit number |
| Byte 29 | | | | | | | | | Channel number |
| Byte 30 | | | | | | | | | Diagnosis type |
| ⋮ | | | | | | | | | |
| | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 | |
| Byte 61 | 1 | 0 | - | | | | | | Unit number |
| Byte 62 | | | | | | | | | Channel number |
| Byte 63 | | | | | | | | | Diagnosis type |

•Unit number

| Bit No. | Content |
|---------|---------------------------------------|
| 0 to 4 | A unit number of 0 to 9 is displayed. |
| 5 | Reserved |
| 6 | (This bit is fixed to 0) |
| 7 | (This bit is fixed to 1) |

•Channel number

| Bit No. | Content |
|---------|---|
| 0 to 5 | A channel number of 0 to 63 is displayed. |
| 6 | Input/Output Type: 00 = Reserved, 01 = Input, 10 = Output |
| 7 | |

•Diagnostic type

| Bit No. | Content |
|---------|---|
| 0 to 4 | Error code |
| 5 | Channel type: 001 = Bit (Unit other than analog unit), 101 = Word (Analog unit) |
| 6 | |
| 7 | |

•Error code

| Error code | | Content | Level *1 |
|------------|---------|--|-------------|
| Binary | Decimal | | |
| 00000 | 0 | Reserved | |
| 00001 | 1 | The short circuit has been detected. | 3 |
| 00010 | 2 | Reserved | |
| : | : | : | |
| 00101 | 5 | Reserved | |
| 00110 | 6 | The open circuit has been detected. | 3 |
| 00111 | 7 | The analog input value has exceeded the set range. | 3 |
| 01000 | 8 | The analog input value has fallen below the set range. | 3 |
| 01001 | 9 | Reserved | |
| : | : | : | |
| 01111 | 15 | Reserved | |
| 10000 | 16 | The analog input or output value has exceeded the upper limit of the user's set value. | 3 |
| 10001 | 17 | The analog input or output value has fallen below the lower limit of the user's set value. | 3 |
| 10010 | 18 | The counter has exceeded the set value. | 3 |
| 10011 | 19 | Reserved | |
| : | : | : | |
| 11101 | 29 | Reserved | |
| 11110 | 30 | There is a connection failure between each unit. | 1 |
| 11111 | 31 *2 | There is a hardware error. | 2 |

*1: If multiple errors have occurred in the same channel of the same unit, they will be given priority in order of level (1→2→3).

*2: The channel number when an error has occurred is 0.

Accessories


For the selection of accessories, refer to the catalog.

(1) Valve plate

EX600-ZMV1

Enclosed parts: Round head screw (M4x6), 2 pcs.


Round head screw (M3x8), 4 pcs.

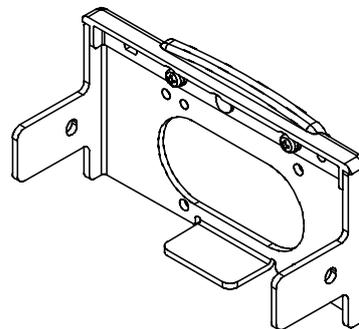

EX600-ZMV2 (Specified for SY series)

Enclosed parts: Round head screw (M4x6), 2 pcs.

Round head screw (M3x8), 2 pcs.

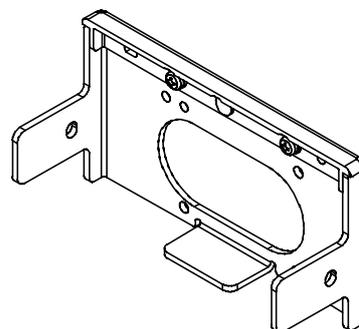

(2) End plate bracket

EX600-ZMA2


Enclosed parts: Round head screw (M4x20), 1 pc.

P tithe screw (4x14), 2 pcs.

EX600-ZMA3 (Specified for SY series)

Enclosed parts: Round head screw (M4x20) with washer, 1 pc.


P tithe screw (4x14), 2 pcs.

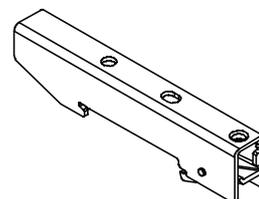

(3) Intermediate support bracket


EX600-ZMB1...for direct mounting

Enclosed parts: Round head screw (M4x5), 2 pcs.

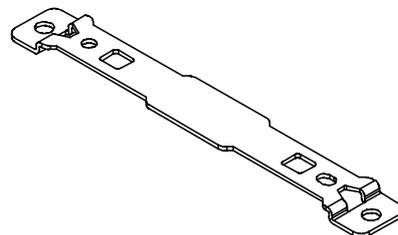


EX600-ZMB2...for DIN rail mounting

Enclosed parts: Round head screw (M4x6), 2 pcs.

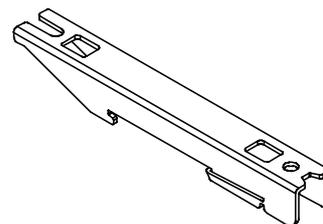

- (4) Seal cap (10 pcs.)
EX9-AWES...for M8
EX9-AWTS...for M12

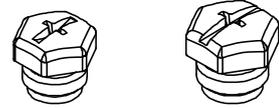

- (5) Marker (1 sheet, 88 pcs.)
EX600-ZT1



- (6) Y Junction connector
PCA-1557785 2xM12 (3 pin) – M12 (5 pin)

- (7) Assembled type connector
PCA-1578078 for power supply, 7/8 inch, Plug, Cable O.D. 12 to 14 mm
PCA-1578081 for power supply, 7/8 inch, Socket, Cable O.D. 12 to 14 mm
PCA-1557701 PROFIBUS DP communication, Plug
PCA-1557714 PROFIBUS DP communication, Socket
PCA-1557730 M8 (3 pin), plug
PCA-1557743 M12 (4 pin), plug, for AWG26 to AWG22, SPEEDCON compatible
PCA-1557756 M12 (4 pin), plug, for AWG22 to AWG18, SPEEDCON compatible

- (8) Power supply cable
PCA-1558810 Cable with 7/8 inch connector, Socket, Straight 2 m
PCA-1558823 Cable with 7/8 inch connector, Socket, Straight 6 m
PCA-1558836 Cable with 7/8 inch connector, Socket, Right angle 2 m
PCA-1558849 Cable with 7/8 inch connector, Socket, Right angle 6 m
PCA-1564927 Cable with M12 connector, B code, Socket, Straight 2 m, SPEEDOCON compatible
PCA-1564930 Cable with M12 connector, B code, Socket, Straight 6 m, SPEEDOCON compatible
PCA-1564943 Cable with M12 connector, B code, Socket, Right angle 2 m, SPEEDOCON compatible
PCA-1564969 Cable with M12 connector, B code, Socket, Right angle 6 m, SPEEDOCON compatible

- (9) PROFIBUS DP communication cable
PCA-1557688 Cable with M12 connector, B code, Socket, Straight 5 m, SPEEDOCON compatible
PCA-1557691 Cable with M12 connector, B code, Plug, Straight 5 m, SPEEDOCON compatible

- (10) Connector extension cable
PCA-1557769 M12 (4 pin), Straight 3 m
PCA-1557772 M8 (3 pin), Straight 3 m

| Revision history |
|------------------|
|------------------|

SMC Corporation

Akihabara UDX 15F,
4-14-1, Sotokanda, Chiyoda-ku, Tokyo 101-0021, JAPAN
Phone: +81 3-5207-8249 Fax: +81 3-5298-5362
URL <http://www.smcworld.com>

Note: Specifications are subject to change without prior notice and any obligation on the part of the manufacturer.
© 2010 SMC Corporation All Rights Reserved

